 


TRAC-MASTER®

 
One Circuit Trac System

T2, T4, T6, T8 and T12


Electrical End Feeds




T21WH, T21BL, T21SL
End Feed Connector and Outlet Box Cover. For outlet box feed. Includes: outlet cover, fixture strap and ground screw.



 
T29WH, T29BL, T29SL
Floating Electrical Feed. Permits mounting any point of trac under outlet box. Includes floating connector, outlet box cover plus extra trac dead end.




T34WH, T34BL, T34SL
Conduit Feed. For surface wiring. Use standard 1/2" connector.

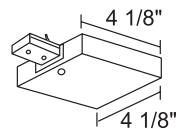

 T36WH, T36BL, T36SL
T-Bar End Feed. Wiring compartment contains standard 1/2" KO's. Feeds surface trac from above, when T-bar is directly above trac.



 
T38WH, T38BL, T38SL
Live End Feed Connector. Feed trac from above with flexible conduit, BX, etc., or end feed in pendant systems. Accepts standard 1/2" connector.



T22WH, T22BL, T22SL
Cord and Plug Connector. Comes with 15' two-wire white cord. Includes surface wire retainers and in-line switch. Max cap. 7 amps.


T122WH, T122BL, T122SL
Same as above but with matching color 3-wire grounded cord and plug. No switch.

 Outrigger System




T47
Outrigger Bracket (non-electrified). For mounting trac out from wall. Use two for 2', 4' or 6' trac sections, three for 8' trac sections and four for 12' trac sections. Order trac and connectors separately. For portable electrical feed, use T22 or T122 Cord & Plug Connector. For permanent wiring, use T38 end feed connector.

 
Trac Joiners



 T20WH, T20BL, T20SL
Accordion Adjustable Joiner. Can flex to 90° angle to left, right, up or down. Joins two trac sections.




T23WH, T23BL, T23SL
Miniature Straight Connector. Joins two trac sections end to end.

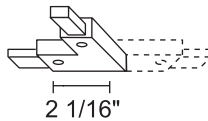


‡ **T24WH, T24BL, T24SL**
Adjustable Connector. Joins two trac sections to make a 90° angle or straight run. Straight and right angle covers supplied. For outlet box feed, T27 cover plate required.

Pendant Stems

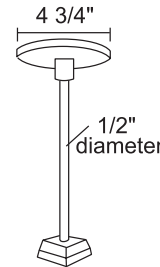


T90-12, T90-18, T90-24, T90-36, T90-48
T-Bar Pendant Stem Kit (12", 18", 24", 36", 48") - Use two for 2', 4' of trac or three for 6', 8' or four for 12' of trac. For electrical feed, order T93 wireway cover. WH, BL, SL

 
T91-12, T91-18, T91-24, T91-36, T91-48
Rigid Ceiling Pendant Stem Kit (12", 18", 24", 36", 48") - Use two for 2', 4' of trac or three for 6', 8' or four for 12' of trac. For electrical feed, order T93 wireway cover. WH, BL, SL



 T93WH, T93BL, T93SL
Wireway Cover for Pendant Stem Kits T90 and T91. Conceals electrical feed wires from stem to connector. One cover required for each trac feed.



 T92
Straight Structural Bridge. For use with T24 Straight Connector. Permits mounting Pendant Stem Kits (T90, T91) at center of Trac Joiner.



T92L-WH, T92L-BL, T92L-SL
Corner Structural Bridge. For use with T24 Right Angle Connector. Permits mounting Pendant Stem Kits (T90, T91) at center of Right Angle Connector.



 
T94WH, T94BL, T94SL
Sloped Ceiling Adapter. Allows T90 or T91 pendant to hang straight down from sloped ceilings. Can be used to hold electrical wires to Trac at up to 60° angle.




T96WH, T96BL, T96SL
Pendant Stem Threaded Coupling. Enables multiple pendant stems to be joined for higher ceiling applications.




T56WH, T56BL, T56SL
Solid Rod Pendant Mounting Kit. Attaches solid 5/16" threaded rod to Trac. Includes: plastic cap, mounting bracket and hardware. Rod not supplied.




‡ **T25WH, T25BL, T25SL**
"T" Connector. Joins three trac sections. For outlet box feed, T27 cover plate required.

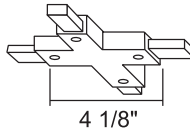

 
‡ **T26WH, T26BL, T26SL**
"X" Connector. Joins four trac sections at 90° angles. For outlet box feed, T27 cover plate required.



T49WH, T49BL, T49SL
Trac Continuation Kit. Permits trac to continue a run around obstructions. Includes one left and one right T34 Conduit Feed. Fits standard 1/2" conduit.

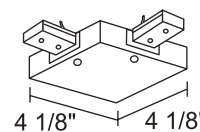

T35WH, T35BL, T35SL
T-Bar Adjustable Joiner Feed. Joins two trac sections to make 90° angle or straight run. Wiring compartment contains standard 1/2" KO's. Feeds from above when T-bar is directly above trac.

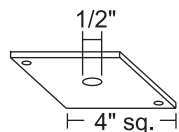

T27WH, T27BL, T27SL
Outlet Box Cover. Use with T24/T25/T26 for outlet box electrical feed. Includes: nipple, locknut and ground screw.

‡ T24, T25 and T26 may not be used as feed connectors in Canada due to special grounding requirements - T24F is approved for use as feed connector in Canada (may also be used in U.S.).



Product specifications subject to change without notice.

1300 S. Wolf Road • Des Plaines, IL 60018 • Phone (847) 827-9880 • Fax (847) 827-2925
220 Chrysler Drive • Brampton, Ontario • Canada L6S 6B6 • Phone (905) 792-7335 • Fax (905) 792-0064
Visit us at www.junolightinggroup.com