


Discrete Output Module

IC670MDL742

GFK-1313D
February 1998

5/12/24 VDC Negative Output Module

The 5/12/24 VDC Negative Output Module (IC670MDL742) provides a single group of 16 discrete outputs. The outputs are negative logic or current-sinking outputs. They switch the loads to the negative side of the DC supply, and thus sink current through the load.

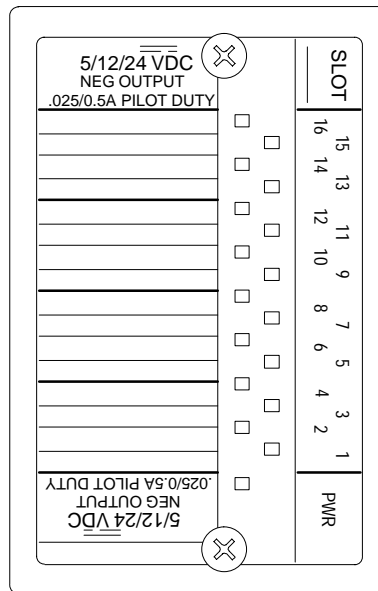

46733

Power Sources

The power for the module itself comes from the power supply in the Bus Interface Unit.

An external source of DC power must be provided for the switches that power the loads. Within the module, the external power supply is connected to a 10 Amp fuse. During operation, the module monitors this power to be sure it is above 4.2 VDC. If not, it is interpreted as a fault by the Bus Interface Unit.

LEDs

Individual LEDs (logic side), visible through the transparent portion of the module top, indicate the on/off status of each output. The PWR LED is on when field and backplane power are present and the module fuse is not blown.

Host Interface

Intelligent processing for this module is performed by the Bus Interface Unit or elsewhere in the system. This includes configuring features such as output default and fault reporting. The module has 16 bits (two bytes) of discrete output data. A Bus Interface Unit is required to obtain this output data from the host and/or local processor.

GFK-1313D
February 1998


5/12/24 VDC Negative Output Module

Module Operation

After checking the Board ID and verifying that the module is receiving appropriate logic power from the Bus Interface Unit (as reflected by the state of the module's Power LED), the Bus Interface Unit then sends output data to the module in serial format. During transmission, the module automatically loops this data back to the Bus Interface Unit for verification.

Serial to parallel converters convert this data into the parallel format needed by the module. Opto-isolators isolate the module's logic components from field outputs. Power from the external power supply is used to drive the FETs that sink current through the loads.

46734

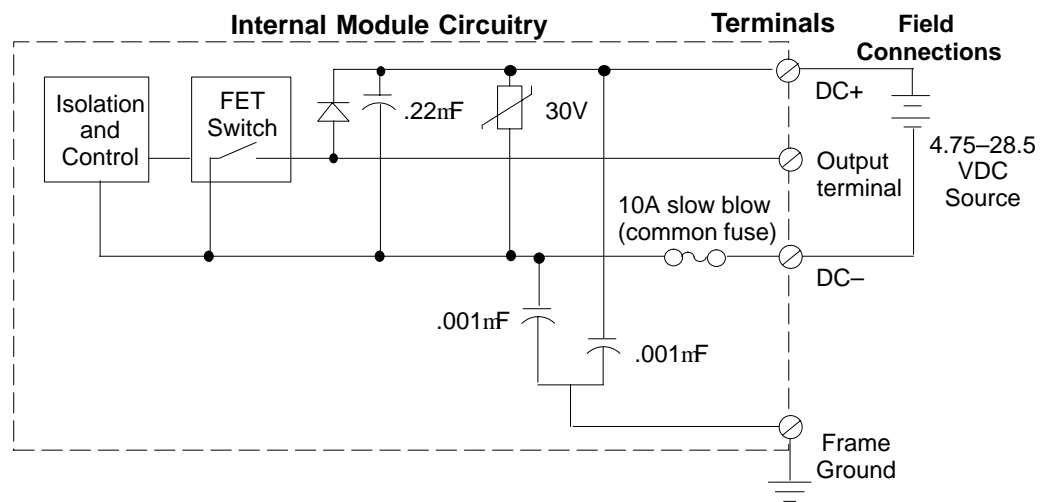


Maximum Load Rating

The outputs can switch loads over the range of 4.5 to 28.5 VDC and are capable of sinking up to a maximum of 0.5 Amp per point. The total maximum steady-state load for the entire module is 8 Amps.

Caution

Failure to observe this maximum load guideline could result in misoperation or destruction of the module.

5/12/24 VDC Negative Output Module

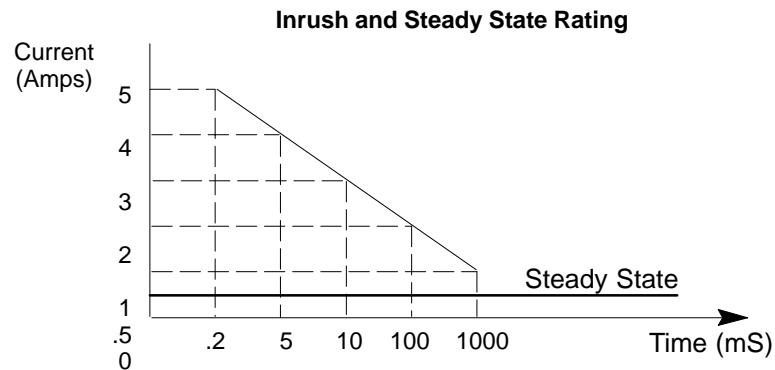GFK-1313D
February 1998

Module Specifications

Module Characteristics	
User Input Voltage	4.75 – 5.25 / 10.5 – 28.5 VDC, 8A maximum
Output Voltage Range	4.5 VDC to 28.25 VDC
Output Current	25mA maximum for 5-volt operation, 0.5 Amp maximum for 10.5 – 28.5 volt operation 8Amps maximum per module 0.025A pilot duty at 4.75–5.25 VDC 0.5A pilot duty at 10.5–28.5 VDC
Outputs per module	16
Indicators	PWR LED indicates backplane power. Logic side LEDs indicate on/off status of each output; blown fuse fault and user supply below 4.2 VDC.
Isolation: User input to logic, user input to frame ground, group to group	250 VAC continuous, 1500 VAC for 1 minute. No isolation between individual points in a group.
Current Drawn from Bus Interface Unit Power Supply	111 mA maximum
Output Characteristics	
Inrush Current	2A max. for 100mS (see Inrush and Steady State diagram)
On state voltage: 5 volts 10.5 – 28.5 volts	0.25V maximum at 25mA maximum 0.25V maximum at 0.5 Amp maximum
Minimum Load Current	1 mA per point
Output Voltage Drop	0.25 volts maximum at rated currents
Output Leakage Current	250 μ A at 28.5 VDC
Response Time-On	200 μ s maximum with 0.5A resistive load
Response Time-Off	200 μ s maximum with 0.5A resistive load
Protection (each output)	Fuse: Metric 5 x 20 mm – 10 Amp, 250 V, Slow Acting Common to all outputs


GFK-1313D
February 1998

5/12/24 VDC Negative Output Module

Module Fuse

The module's 10 Amp fuse protects outputs against the effects of polarity reversal of the external power supply or excessive current through the output points. If incorrect connection of the power supply blows the fuse, it is indicated by the module's PWR LED. In addition, the module provides a Blown Fuse diagnostic message to the BIU. IF the fuse blows, disconnect power, remove the module and replace the fuse. *CAUTION: Electrostatic discharge can damage the module when it is not installed on an I/O Terminal Block. Always observe normal ESD protection practices when handling an un-installed module.*

Fuse location is shown below. Pry the fuse upward to remove it, taking care not to damage any components in the module. Place the new fuse in position and press it into the holder.

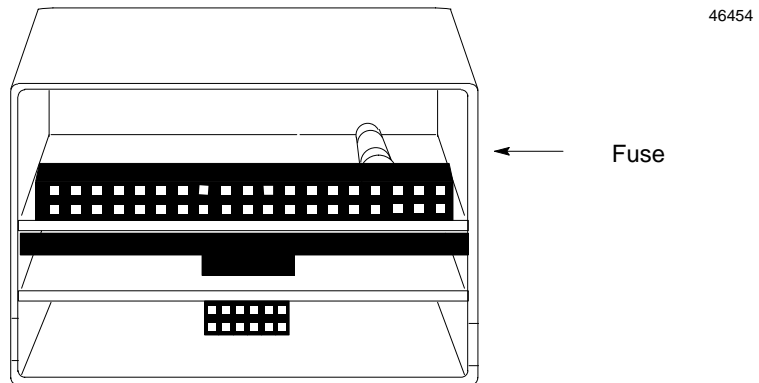

Keying Locations

Optional keying locations for the 5/12/24 VDC Negative Output Module are shown below.

Keying Locations									
A	B	C	D	E	F	G	H	J	K
✓	✓						✓		✓