 


OUTLET STRAPS

| | | | |
|---|--|---|--|
| PRODUCT 1-Port Decorator Outlet Strap | PART # WP3411-BK WP3411-BR WP3411-IV WP3411-LA WP3411-WH | PRODUCT 6-Port Decorator Outlet Strap | PART # WP3416-BK WP3416-BR WP3416-IV WP3416-LA WP3416-WH |
| PRODUCT 2-Port Decorator Outlet Strap | PART # WP3412-BK WP3412-BR WP3412-IV WP3412-LA WP3412-WH | PRODUCT Blank Decorator Outlet Strap | PART # WP3410-BK WP3410-BR WP3410-IV WP3410-LA WP3410-WH |
| PRODUCT 3-Port Decorator Outlet Strap | PART # WP3413-BK WP3413-BR WP3413-IV WP3413-LA WP3413-WH | BOXES | |
| PRODUCT 4-Port Decorator Outlet Strap | PART # WP3414-BK WP3414-BR WP3414-IV WP3414-LA WP3414-WH | PRODUCT 1-Gang Surface Mount Back Box | PART # WP3409-WH |
| | | PRODUCT 1-Port Surface Mount Box | PART # WP3501-WH |
| | | PRODUCT 2-Port Surface Mount Box | PART # WP3502-WH |


COLOR OPTIONS



HOME THEATER

| | | | |
|--|---|---|--|
| PRODUCT 5.1 Home Theater Strap | PART # F9004-BK F9004-BR F9004-IV F9004-LA F9004-WH | PRODUCT Pre-Configured HDMI 2-Port Strap | PART # WP1011-BK WP1011-LA WP1011-WH |
| PRODUCT Audio Decorator Strap | PART # F9005-BK F9005-BR F9005-IV F9005-LA F9005-WH | PRODUCT Component Video/Digital Audio Strap | PART # WP1010-BK WP1010-LA WP1010-WH |
| PRODUCT 2-Binding Post Speaker Strap | PART # F9006-BK F9006-BR F9006-IV F9006-LA F9006-WH | PRODUCT Cable Access Strap | PART # WP1014-WH |

WIRING DIAGRAM

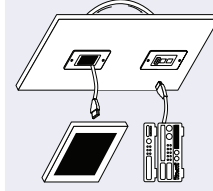

INSTALLATION AT-A-GLANCE
HD CONNECTIVITY FOR FLAT PANELS

1. Install the Cable Access Strap in a single gang box behind the flat panel TV.
2. Install the HDMI 2-Port Strap in a single gang box behind the video source, such as a DVD player.
3. Connect an HDMI cable to the back of the TV.
4. Run the cable through the Cable Access Strap and behind the wall to connect to the back of the HDMI coupler.
5. Connect an HDMI cable from the video source to the front of the HDMI Strap.

COLOR OPTIONS

