

Coupling units

Manual motor protectors

Close couplers for contactors

	Miniature contactors		AF contactors					AS contactors		A / AE Contactors		Catalog number
	B6...B7	BC6...BC7	AF09...AF16	AF09Z...AF16Z	AF26...AF38	AF26Z...AF38Z	AF50...AF75	AF95...AF110	AS09...AS16	ASL09...ASL16	A50...A75, AE50...AE75	
Manual motor protector	•	•										
MS116-0.16...16			•	•	•	•			•	•		
MS116-20...25			•	•								
MS116-32					•	•						
MS132-0.16...10	•	•	•	•	•	•						
MS132-12...16	•	•	•	•	•	•			•	•		
MS132-20...25			•	•	•	•						
MS132-32					•	•						
MS45x-40...50							•			•		
MS49x-40...100							•			•		
MS495-40...100								•			•	

Note: For spring terminated AS/ASL, use part number BEA16-3U with integral wire leads for spring terminals.



MS132 + AF Contactor



BEA16-4



BEA16-3