

## Accessories

### S200, S200P, S280UC & S280W

### UL 1077, CSA 22.2



S2C-H6R



S2C-A



S2C-UA

#### Auxiliary contacts

The auxiliary contacts will signal whether the breaker is in the ON or OFF position.

Description	Catalog number
For field mounting: right side	<b>S2C-H6R</b>

#### Bell alarm

The bell alarm includes a set of contacts that will only signal when the breaker has tripped. Typically the contacts would be connected to an alarm or bell to signal the operator that an overcurrent trip has occurred. The bell alarm also includes a test button for testing the alarm contacts without opening the breaker.

Description	Catalog number
For field mounting: right side	<b>S2C-S/H6R</b> ①

#### Shunt trip

For remote tripping of breaker, a shunt trip device can be added to the MCB. The solenoid device opens the breaker after control voltage is applied.


Description	Catalog number
For field mounting: right side	
A1-12-60 VAC (12 – 60 VDC)	<b>S2C-A1</b>
A2-110-415 VAC (110 – 250 VDC)	<b>S2C-A2</b>

#### Undervoltage release

When control voltage drops below approximately 50 % of rated voltage, the UVR opens the breaker. The breaker can not be operated unless proper control voltage is first applied to the UVR coil.

Description	Catalog number
For field mounting: right side	
12 VDC	<b>S2C-UA 12</b>
24 VAC/VDC	<b>S2C-UA 24</b>
48 VAC/VDC	<b>S2C-UA 48</b>
110 VAC/VDC	<b>S2C-UA 110</b>
220 VAC/VDC	<b>S2C-UA 230</b>
380 VAC	<b>S2C-UA 400</b>

#### Possible mounting arrangements of MCB accessories

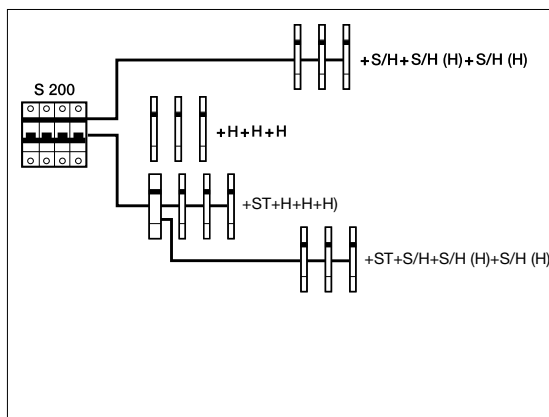

Legend	
Auxiliary contact	<b>H</b>
Bell alarm/Auxiliary contact	<b>S/H</b>
Bell alarm/Auxiliary contact used as auxiliary contact	<b>S/H (H)</b>
Shunt trip	<b>ST</b>
Undervoltage release	<b>UR</b>

① Combination bell alarm/auxiliary contact.