

Accessories

S200, S200U and S200UP

pro M compact



S2C-H6R



S2C-H10



S2C-A1



S2C-UA12DC



S2C-H6RU

Electrical accessories	For use on:	Catalog number	List price	Delivery class	Sugg. order qty	Wgt. kg (1 pc.)
Auxiliary contacts						
For field mounting right side: 1 form "C" contact	S200	S2C-H6R		A	1	0.04
	S200U & S200UP	S2C-H6RU				
For field mounting below: 1 N.O. 1 N.C.	S200	S2C-H10		A	15	0.02
	S200	S2C-H01				

The auxiliary contacts will signal whether the breaker is in the ON or OFF position. Wire size: 18 AWG to 14 AWG.

Bell alarm or auxiliary contacts (universal)

Electrical accessories	For use on:	Catalog number	List price	Delivery class	Sugg. order qty	Wgt. kg (1 pc.)
For field mounting right side: 1 form "C" contact	S200	S2C-S/H6R		A	1	0.04
	S200U & S200UP	S2C-S6RU				

The bell alarm includes a set of contacts that will only signal when the breaker has tripped. Typically the contacts would be connected to an alarm or bell to signal the operator that an overcurrent trip has occurred. The bell alarm also includes a test button for testing the alarm contacts without opening the breaker. Wire size: 18 AWG to 16 AWG.

Shunt Trip

Electrical accessories	For use on:	Catalog number	List price	Delivery class	Sugg. order qty	Wgt. kg (1 pc.)
For field mounting right side: A1-12-60VAC (12-60VDC) A2-110-415VAC (110-250VDC)	S200	S2C-A1 S2C-A2		A	1	0.150
	S200U & S200UP	S2C-A1U S2C-A2U				

For remote tripping of breaker, a shunt trip device can be added to the MCB. The solenoid device opens the breaker after control voltage is applied. Shunt trips are available for on control system voltage (12-415VAC-VDC).

Undervoltage release

Electrical accessories	For use on:	Catalog number	List price	Delivery class	Sugg. order qty	Wgt. kg (1 pc.)
For field mounting: 12VDC 24VAC 24VDC 48VAC 48VDC 110VAC 110VDC 230VAC 230VDC 400VAC	S200	S2C-UA12DC		B	1	0.09
		S2C-UA24AC				
		S2C-UA24DC				
		S2C-UA48AC				
		S2C-UA48DC				
		S2C-UA110AC				
		S2C-UA110DC				
		S2C-UA230AC				
		S2C-UA230DC				
		S2C-UA400AC				

When control voltage drops below approximately 50% of rated voltage, the UVR opens the breaker. The breaker can not be operated unless proper control voltage is first applied to the UVR coil. Similar in size and mounting to the shunt trip accessory.

Factory mounting

All accessories can be easily mounted in the field. For factory mounting of any accessory devices, add **\$50** list to total price per breaker. To create complete catalog number, take suffix of accessory device following «S2C-» and add suffix to end of breaker part number. Multiple suffixes must be added in alphabetical order.

Example: S202-K20A1 \$ 240 (2 pole, 20A breaker with type A1 shunt trip) S202-K20 @ \$82 + S2C-A1 \$ 268 (2 pole, 20A breaker with type A2 shunt trip and H6R aux. contacts) S202-K20 @ \$82 + S2C-A1 @ \$108 + S2C-H6R @ \$28 + factory mounting @ \$50 = \$260

Auxiliary contacts and shunt trips may be mounted in combination.

Auxiliary contacts

	Rating
Rated current:	10A
Min. voltage:	24VAC/VDC
Mechanical life:	10,000 operations

Delivery Class

- A** - Standard item, stock to 2 weeks lead time
- B** - Stock to 4 weeks lead time
- C** - 6 to 8 week lead time