

PHILIPS ADVANCE


RLQ-120-TP

Brand Name	MAGNETIC-NPF
Ballast Type	Magnetic
Starting Method	Trigger Start
Lamp Connection	Series
Input Voltage	120
Input Frequency	60 HZ
Status	Active

Electrical Specifications

Lamp Type	Num. of Lamps	Rated Lamp Watts	Min. Start Temp (°F/°C)	Input Current (Amps)	Input Power (Watts)	Ballast Factor	MAX THD %	Power Factor	Lamp Current Crest Factor	B.E.F.
F13T8	1	13	20/-07	0.54	23	1.00	10	0.36	1.5	4.35
F14T12	1	14	50/10	0.58	28	0.92	10	0.40	1.5	3.29
F15T12	1	14.5	50/10	0.58	29	0.99	05	0.42	1.5	3.35
F15T8	1	15	50/10	0.56	28	1.01	05	0.41	1.4	3.60
* F20T12	1	20	50/10	0.55	28	0.83	05	0.42	1.4	2.97

Wiring Diagram

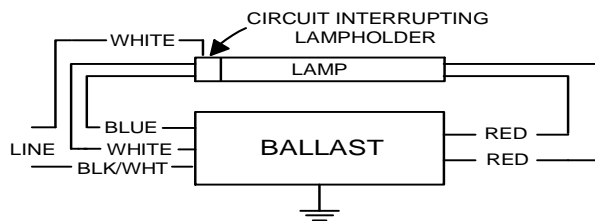


Diag. 16

The wiring diagram that appears above is for the lamp type denoted by the asterisk (*)

Standard Lead Length (inches)

	in.	cm.		in.	cm.
Black			Yellow/Blue		
White	18		Blue/White		
Blue	18		Brown		
Red	12		Orange		
Yellow			Orange/Black		
Gray			Black/White	10	
Violet			Red/White		

Enclosure

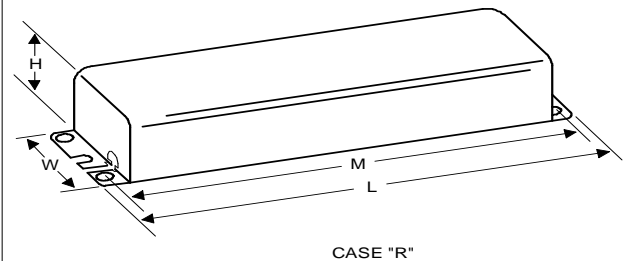

Enclosure Dimensions

OverAll (L)	Width (W)	Height (H)	Mounting (M)
6.50 "	1.9375 "	1.375 "	6 "
6 1/2	1 15/16	1 3/8	6
16.5 cm	4.9 cm	3.5 cm	15.2 cm



Revised 02/27/98

Data is based upon tests performed by Philips Lighting N.A in a controlled environment and representative of relative performance. Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.

Philips Lighting Electronic N.A

10275 West Higgins Road Rosemont, IL 60018 Tel.: 800-322-2086 Fax: 888-432-1882
Customer Support/Technical Service: 800-372-3331 · OEM Support: 866-915-5886