

Modular Meter Centres

Meter Centre Stack, Meter Socket Module and Main Bus Connectors

Selection

Basic Meter Stack (cold metering) - Meter socket modules and blank plates must be ordered separately

Main Service Voltage	Sub-service Voltage	Catalogue Number	Max. Sub-service Meter Socket for each amperage ^①			Dimensions - Inches (mm)			Height - MOD	Weight - lbs.(kg)
			100A	125A	200A	H	W	D		
120/240 1Ø3W	120/240 1Ø3W	MMC1	N/A	6	4	78 (1981)	14 (356)	7 1/4 (184)	6	67 (30.4)
120/208 1Ø3W	120/208 1Ø3W	MMC3	N/A	6	4					7 (31.8)
120/208 3Ø4W	120/208 3Ø3W	MMC3	4	N/A	2					

Complete Meter Stack (cold metering)^{①②} - Meter socket modules included

Main Service Voltage	Sub-service Voltage	Catalogue Number	Number of Jaws	Sub-service Meter Socket included	Dimensions - Inches (mm)			Height - MOD	Weight - lbs.(kg)
					H	W	D		
120/240 1Ø3W	120/240 1Ø3W	MMC14-6125	4	6 x MMS4-125	78 (1981)	14 (356)	7 1/4 (184)	6	109 (49.6)
120/208 1Ø3W	120/208 1Ø3W	MMC35-6125	5	6 x MMS5-125					112 (50.9)

Meter Socket Module^①

Sub-service Voltage	Meter Socket Rating	Catalogue Number	Number of Jaws	Provision Breaker type	Phase Connection	Height		Weight - lbs.(kg)
						in. (mm)	MOD	
120/240 1Ø3W	125A	MMS4-125	4	BQ, BQH, HBQ, Q, QP, QPH, HQP	AB	8 7/8 (225)	1	7 (3.2)
120/240 1Ø3W	200A	MMS4-200	4	EQ96XX	AB	13 5/16 (338)	1.5	11 (5)
		MMS4-200QJ	4	QJ2, QJH2, QJ2H, HQJ2H				
120/208 3Ø4W	125A	MMS5-125	5 ^③	BQ, BQH, HBQ, Q, QP, QPH, HQP	AB ^④	8 7/8 (225)	1	7 (3.2)
120/208 3Ø4W	200A	MMS5-200	5 ^③	EQ96XX	AB ^④	13 5/16 (338)	1.5	11 (5)
		MMS5-200QJ	5 ^③	QJ2, QJH2, QJ2H, HQJ2H				
120/208 3Ø4W	100A	MMS7-100	7 ^③	BQ, BQH, HBQ, Q, QP, QPH, HQP	ABC	13 5/16 (338)	1.5	10 (4.6)
120/208 3Ø4W	200A	MMS7-200	7 ^③	QJ2, QJH2, QJ2H, HQJ2H		26 5/8 (676)	3	16 (7.3)

Main Bus Connector Kit - Allows the connection of two meter stacks

Sub-service Voltage	Ampere Rating	Catalogue Number	Use with Meter Module Type	Weight - lbs.(kg)
120/240 1Ø3W	600A	MBSS1-600	MMC1	3 (1.3)
	1200A	MBSS1-1200	MMC14-6125	7 (3.18)
120/208 3Ø4W	600A	MBSS3-600	MMC3	4 (1.82)
	1200A	MBSS3-1200	MMC35-6125	10 (4.55)

① Provision only, breakers not included

② Complete meter stacks are factory balanced for ease of installation

③ Meter socket modules with 5 and 7 jaws can be assembled in the same meter stack as long as the system is balanced.

④ MMS5-125 and MMS5-200 have AB phase connections by default. Phasing connections can be changed on the field to AC or BC to balance the load on the system.