Opticom[®] Rack Mount Fiber Enclosures

specifications

Rack mount fiber enclosures shall house, organize, manage and protect fiber optic cable, terminations, splices, connectors and patch cords. Enclosure shall accommodate all Panduit trunk cables, connectors, patch cords, fiber adapter panels (FAP) and fiber mount panels (FMP). The enclosure shall include integral cable management and bend radius control for transition to vertical cable managers. Fiber optic enclosures shall be constructed of steel material. Molded front and back doors shall be removable for cabling and connector installation. 1 RU and 2 RU enclosures shall provide full front and rear access with a drawer that slides forward and backward. 3 RU and 4 RU enclosures shall feature a fixed bulkhead design. Enclosure shall have multiple knockouts for a variety of trunk cable entry points.

technical information

Mounting: Accessories:	Universal brackets (included) allow enclosure to fit in 19" or 23" rack Mounting hardware and accessory kit with labels included	
	FRME4:	6.62"H x 17.0"W x 11.8"D (168mm x 432mm x 299mm), 4 RU
	FRME3:	5.00"H x 17.0"W x 11.8"D (127mm x 432mm x 299mm), 3 RU
	FRME2U:	3.48"H x 17.38"W x 14.2"D (88mm x 441.5mm x 361mm), 2 RU
Dimensions:	FRME1U:	1.74"H x 17.38"W x 14.2"D (44mm x 441.5mm x 361mm), 1 RU

key features and benefits

Works with all Panduit® Opticom® LC, SC, ST, MT-RJ and MTP* Connector Fiber Adapter Panels	Provides versatility and flexibility with a fully modular solution for a variety of fiber optic patching, terminating, and splicing applications		
Integral cable management	Provides proper cable routing pathways and ensures minimum cable bend radius for end-to-end signal integrity		
Bi-directional pullout drawers (FRME1U and FRME2U)	Improves front access to patch cords and connectors and rear access to terminations, slack storage and trunk cable/inter-connect cables; faster and easier installation for lower total installed cost and reduced maintenance costs		
Hinged, removable front and rear doors	Enables access to fiber optic patch cords without needing to move drawer for easier moves, adds, and changes		
One-to-one patching and splicing capability (FRME1U and FRME2U)	Yields higher port densities for fusion splice applications with one-to-one patching-to-splicing fiber count for up to 72 splices per RU		
TIA-606-A compatible labeling	Standards-based, mechanically printed labeling of fiber connectivity, patchfields, and enclosures enables clear and accurate labeling for easy moves, adds and changes		

applications

Opticom®Rack Mount Fiber Enclosures provide a flexible system suitable for managing fiber terminations, connections, and patching in all types of applications. The enclosure can serve as a transition from backbone cabling to distribution switching in telecommunications rooms or closets, an interconnect to active equipment in server cabinets or switch racks, or can be specified for cross-connect or inter-connect use in a main distribution area or horizontal distribution area.

*MTP is a registered trademark of US Conec Ltd.

The enclosures can manage from 12 to 72 fibers in 1 RU and up to 288 fibers in 4 RU when used with standard FAP and FMP series adapter panels loaded with LC, SC, ST, MT-RJ, or MTP* style adapters. Integral cable management, bend radius control, and slack management features protect fiber optic cables, patch cords, and connectors ensuring end-to-end signal integrity for increased network reliability.



Opticom® Rack Mount Fiber Enclosures 3 FAP openings (72 fibers, 1 RU): FRME1U 6 FAP openings (144 fibers, 2 RU): FRME2U 9 FAP openinas (216 fibers, 3 RU): FRME3 12 FAP openings (288 fibers, 4 RU): FRME4 **Opticom® Fiber Adapter Panels** 12 duplex LC, 10Giq[™]: FAP12WAQDLCZ 6 duplex LC, 10Gig™: FAP6WAQDLCZ 12 duplex LC: FAP12WEIDLC 6 duplex LC: FAP6WEIDLC 6 duplex SC, 10Gig™: FAP6WAQDSCZ 3 duplex SC, 10Gig™: **FAP3WAQDSCZ** 6 duplex SC: FAP6WEIDSC 3 duplex SC: **FAP3WEIDSC** 6 simplex ST: FAP6WST 6 duplex MT-RJ: FMP6WMTRJ MPO/MTP*: FAP4WBLMTP MPO/MTP*: FAP6WBLMTP Splice Modules (For Use with

FRME1U and FRME2U Only)


Splice module (fusion): FOSMF Splice module (mechanical): FOSMM Tools and Accessories


Panduit connector	
removal tool:	PCRT1
Fiber slack spool	
1 RU:	FMS1
Fiber slack spool	
2 RU:	FMS2
Bend radius clip:	FEBRC


Fiber Capacities

		Enclosure and Fiber Count				
Fiber Adapter Panel Type	FRME1U (holds up to 3 FAPs)	FRME2U (holds up to 6 FAPs)	FRME3 (holds up to 9 FAPs)	FRME4 (holds up to 12 FAPs)		
Twelve duplex LC adapters	72	144	216	288		
Eight duplex LC adapters	48	96	144	192		
Six duplex LC adapters	36	72	108	144		
Six duplex SC adapters	36	72	108	144		
Four duplex SC adapters	24	48	72	96		
Three duplex SC adapters	18	36	54	72		
Eight simplex ST adapters	24	48	72	96		
Six simplex ST adapters	18	36	54	72		
Six duplex MT-RJ adapters	36	72	108	144		
Six simplex FC adapters	18	36	54	72		

Opticom[®] Rack Mount Fiber Enclosures

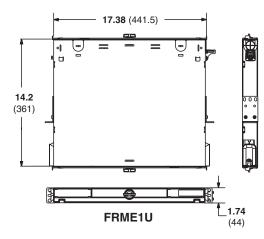

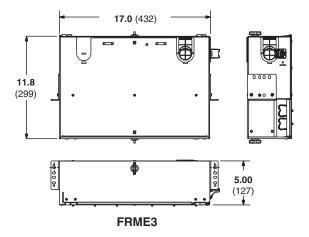

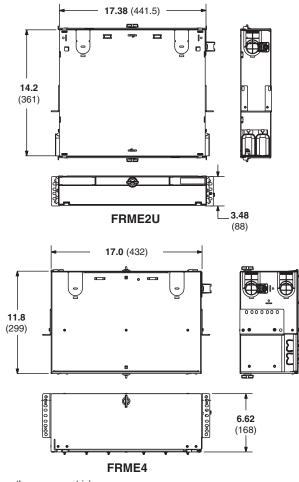

Dimensions are in inches (Dimensions in parentheses are metric). WORLDWIDE SUBSIDIARIES AND SALES OFFICES

PANDUIT CANADA Markham, Ontario cs-cdn@panduit.com Phone: 800.777.3300

PANDUIT EUROPE LTD. London, UK cs-emea@panduit.com Phone: 44.20.8601.7200

PANDUIT SINGAPORE PTE. LTD. Republic of Singapore cs-ap@panduit.com Phone: 65.6305.7575 PANDUIT JAPAN P Tokyo, Japan Ja cs-japan@panduit.com P hone: 81.3.6863.6000 P

PANDUIT LATIN AMERICA Jalisco, Mexico cs-la@panduit.com Phone: 52.33.3777.6000 PANDUIT AUSTRALIA PTY. LTD. Victoria, Australia cs-aus@panduit.com Phone: 61.3.9794.9020

For a copy of Panduit product warranties, log on to www.panduit.com/warranty

For more information



Visit us at www.panduit.com

Contact Customer Service by email: cs@panduit.com or by phone: 800-777-3300 ©2016 Panduit Corp. ALL RIGHTS RESERVED. FBSP119--WW-ENG 12/2016