

# 3VA Molded Case Circuit Breakers

## 3VA63 400A Electronic Trip Circuit Breakers

Technical information

### Connections for 75C wire for 3VA53 and 3VA63

Type	Minimum cable size	Maximum cable size	Part Number (kit of 3 lugs)	Part Number (kit of 4 lugs)
Steel wrap around (Cu cable only) single cable lugs	1/0	500 kcmil	3VA9473-0JA13	3VA9474-0JA13
Aluminum body lug (Cu/Al cable) single cable lugs	AWG 1	600 kcmil	3VA9373-0JB13	3VA9374-0JB13
Aluminum body lug with control wire tap (Cu/Al cable) single cable lugs	AWG 1	600 kcmil	3VA9373-0JG13	3VA9374-0JG13
Aluminum body lug, 2 cables (Cu/Al cable) with 1 extended terminal cover	2/0	600 kcmil	3VA9473-0JJ23	3VA9474-0JJ23
Aluminum body lug, 2 cables (Cu/Al cable) with control wire tap and 1 extended terminal cover	2/0	600 kcmil	3VA9473-0JC23	3VA9474-0JC23
Distribution lug, 6 Cables (Cu/Al cable) with 1 extended terminal cover	AWG 14	AWG 2	3VA9373-0JF60	3VA9374-0JF60
Copper body lug (Cu cable only) single cable lugs (meets requirements for 100% rated breakers)	AWG 1	600 kcmil	3VA9373-0JD13	3VA9374-0JD13
Copper body lug (Cu cable only) with control wire tap single cable lugs	AWG 1	600 kcmil	3VA9373-0JK13	3VA9374-0JK13
Copper body lug, 2 cables (Cu cable only) with 1 extended terminal cover (meets requirements for 100% rated breakers)	2/0	600 kcmil	3VA9473-0JE23	3VA9474-0JE23
Copper body lug, 2 cables (Cu cable only) with control wire tap and 1 extended terminal cover	2/0	600 kcmil	3VA9473-0JL23	3VA9474-0JL23

### Enclosures for 3VA53 and 3VA63 (3-pole only)

NEMA Type	Catalog Number
1 Surface	3VAE6001S
1 Flush	3VAE6001F
3R	3VAE6003R
12	3VAE60012
4X (304)	3VAE6004X
4X (316)	3VAE6004X316
Neutral	HN656ACB
200% Neutral	HN678ACB

7  
MOLDED CASE  
CIRCUIT BREAKERS

Internal accessories Optional equipment	Slot No.:	3VA5 & 3VA6 400/600 A 3-pole														3VA5 & 3VA6 400/600 A 4-pole													
		25	24	23	22	21	11	12	13	14	15	35	34	33	32	31	25	24	23	22	21	11	12	13	14	15			
Auxiliary switch	Type																												
Auxiliary switch	AUX_HQ	x x x x x x x x x x x x x x x x														x x x x x x x x x x x x x x x x													
	AUX_HQ_el	x x x x x x x x x x x x x x x x														x x x x x x x x x x x x x x x x													
	AUX_HP	x x x x x x x x x x x x x x x x														x x x x x x x x x x x x x x x x													
Leading changeover switch	LCS_HQ	x														x													
	LCS_HQ_el	x														x													
	LCS_HP	x														x													
Alarm switch	Type																												
Trip alarm switch	TAS_HQ	x x x x x x														x x x x x x													
	TAS_HQ_el	x x x x x x														x x x x x x													
	TAS_HP	x x x x x x														x x x x x x													
Electrical alarm switch <sup>Ⓞ</sup>	EAS_HQ	x														x													
	EAS_HQ_el	x														x													
Auxiliary release	Type																												
Shunt trip flexible	STF	x														x													
Shunt trip left	STL	x														x													
Undervoltage release	UVR	x														x													
Universal release	UNI	x														x													
ETU/communication <sup>Ⓞ</sup>	Type																												
Communication module	COM060	x														x													
24 V module		x														x													
Other																													
Cylinder lock (type Ronis)		x														x													

### Trip Settings for 3VA63

ETU320-LI, ETU330-LIG, ETU350-LSI

Continuous Amperage	LI, LIG, LSI			LSI		LIG	LI, LIG, LSI 4P only
	I <sub>n</sub> (Amp)	I <sub>r</sub> (Amp) (L)	t <sub>td</sub> (sec) (L)	I <sub>i</sub> (Amp) (I) <sup>Ⓞ</sup>	I <sub>sd</sub> = xI <sub>r</sub> (Amp) (S)		t <sub>sd</sub> (sec) (S)
250	100 - 250	0.5 - 17	375-3000	1.5 - 10	0.08 - 0.4	50 - 250	0.5 - 1 / OFF
400	150 - 400	0.5 - 17	600-4000	1.5 - 10		80 - 400	0.5 - 1 / OFF

<sup>Ⓞ</sup> I<sub>i</sub> for ETU350 is fixed at the maximum level shown in table.

ETU550-LSI, ETU556 LSI(A), ETU560-LSIG, ETU820-LI, ETU830-LIG, ETU850-LSI, ETU856 LSI(A), ETU860-LSIG

Continuous Amperage	LI, LIG, LSI, LSIG, LSI(G)				LSI, LSIG, LSI(G)		LIG, LSIG, LSI(G)		LSI 3P with External CT	LI, LIG, LSI, LSIG, LSI(G) 4P only
	I <sub>n</sub> (Amp)	I <sub>r</sub> (Amp) (L)	t <sub>td</sub> (sec) (L)	I <sub>i</sub> (Amp) (I)	I <sub>sd</sub> (Amp) (S)	t <sub>sd</sub> (sec) (S)	I <sub>g</sub> (Amp) (G)	t <sub>g</sub> (G)		I <sub>N</sub> =xI <sub>r</sub> (Amp)
250	100 - 250	0.5 - 25	375-3000	150 - 2500	0.05 - 0.5	50 - 250	0.05 - 0.8	50 - 400 / OFF	50 - 400 / OFF	
400	150 - 400	0.5 - 17	600-4000	240 - 4000		80 - 400		80 - 640 / OFF	80 - 400 / OFF	

For specific trip settings refer to the Electronic Trip Unit section of the 3VA Systems Manual, which can be found in the document download center at [https://www.siemens.com/download?BTLV\\_50412](https://www.siemens.com/download?BTLV_50412)

<sup>Ⓞ</sup> These accessories are for electronic trip breakers only.

See page 7-69 for internal accessory part numbers.

001\_19495