

# LATCH CAM REMOVAL

1. Use pliers as shown.
2. Squeeze tabs on latch cam with pliers.
3. Lift latch cam and push in direction shown.

