

## Non-Locking Wingknob Handle, C-WHNL

1. Remove M6 screw fastening existing insert to latch assembly.
  2. Remove insert, o-ring, and wave washer from latch housing.
  3. Assemble handle, new o-ring, and wave washer to latch housing as shown in figure 1.
  4. Reinstall M6 screw to handle and torque to 4.3 NM (38 in-lbs).
- NOTE: Not recommended for multiple point latch systems.

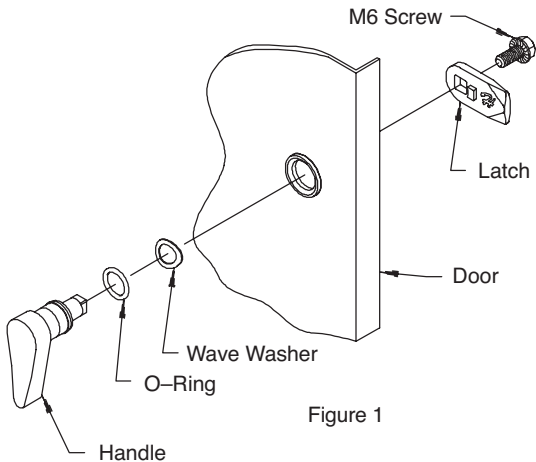


Figure 1

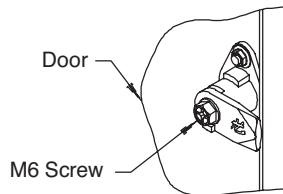


Figure 2  
(Back Side of Door)