

## INSTALLATION INSTRUCTIONS 68R SERIES RECESSED SERVICE FLOOR BOX COVERS

COMMERCIAL APPLICATION


**Catalog Numbers** 

68R-CST-GRY	68R Series Recessed Service Floor Box Cover for 68-P Box – Gray
68R-CST-BLK	68R Series Recessed Service Floor Box Cover for 68-P Box – Black
68R-CST-BRN	68R Series Recessed Service Floor Box Cover for 68-P Box – Brown
68R-CST-BGE	68R Series Recessed Service Floor Box Cover for 68-P Box – Beige
68R-CST-BRS	68R Series Recessed Service Floor Box Cover for 68-P Box – Black Cover with Brass Flange Ring
68R-CST-ALM	68R Series Recessed Service Floor Box Cover for 68-P Box – Black Cover with Aluminum Flange Ring

**IMPORTANT:** Read all instructions before installing. This instruction sheet contains installation instructions for Non-Metallic & Metallic Box Configurations. Operating instructions on page 5 are common to both configurations.



**NOTE:** Follow National and Local Electrical Codes when installing box and cover to floor.

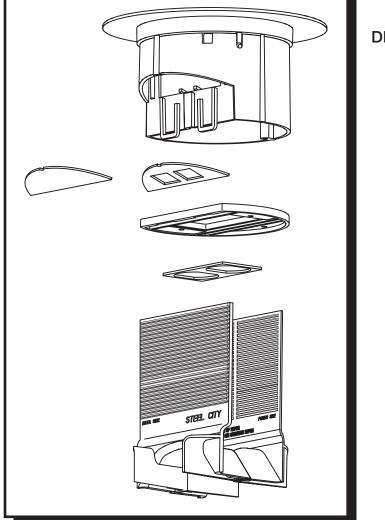



### **TABLE OF CONTENTS**


#### DESCRIPTIONS

PAGE

Nonmetallic Round Floor Box	
Contents and Features	2
Conduit Sizes	2
Concrete Application	2
Data Cables	
Divider Assembly	2
Divider Height Adjustment	3
Receptacle Installation	3
Bottom Device Plate Installation	3
Data Plate Installation	3
Data Cable Routing	4
Floor Preparation	4
Ring Installation (Brass & Alum. Only)	4
Box and Cover Floor Installation	4
Applying Anchor Screws	4
Metallic Floor Box Contents and Features Box Assembly Bottom Device Plate Installation Data Plate Installation Sub-Floor Cut Finished Floor Cut	5 5 5 6
Ring Installation (Brass & Alum. Only)	
Box and Cover Floor Installation	
Applying Anchor Screws	
Operating Instructions 68R Round Recessed Floor Box	

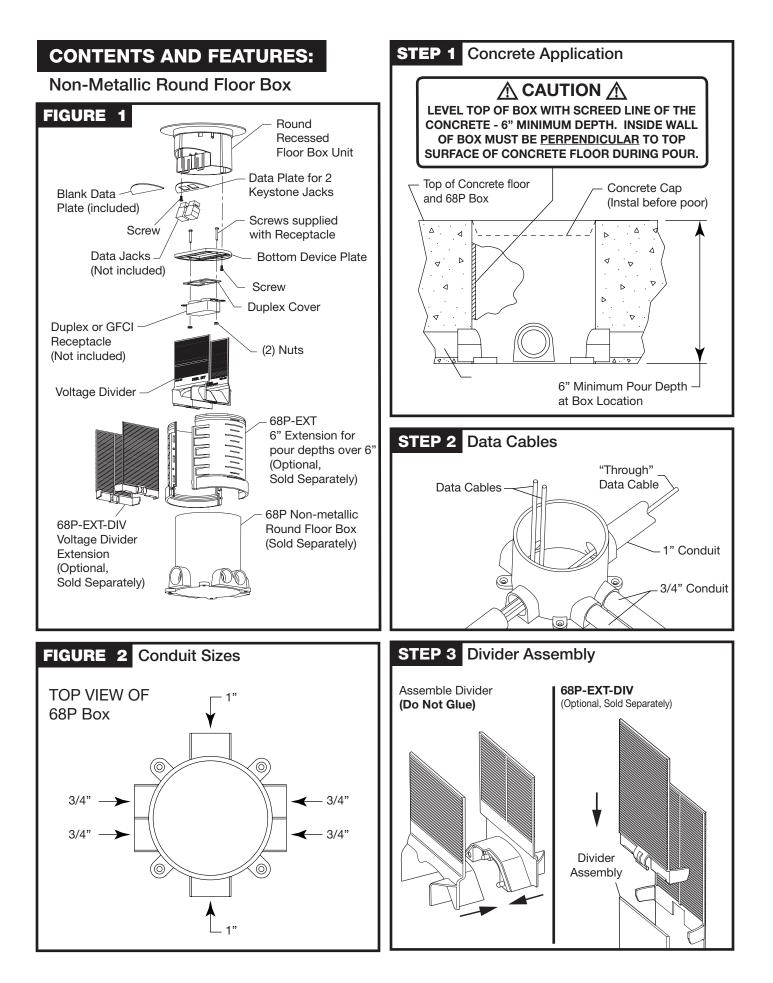

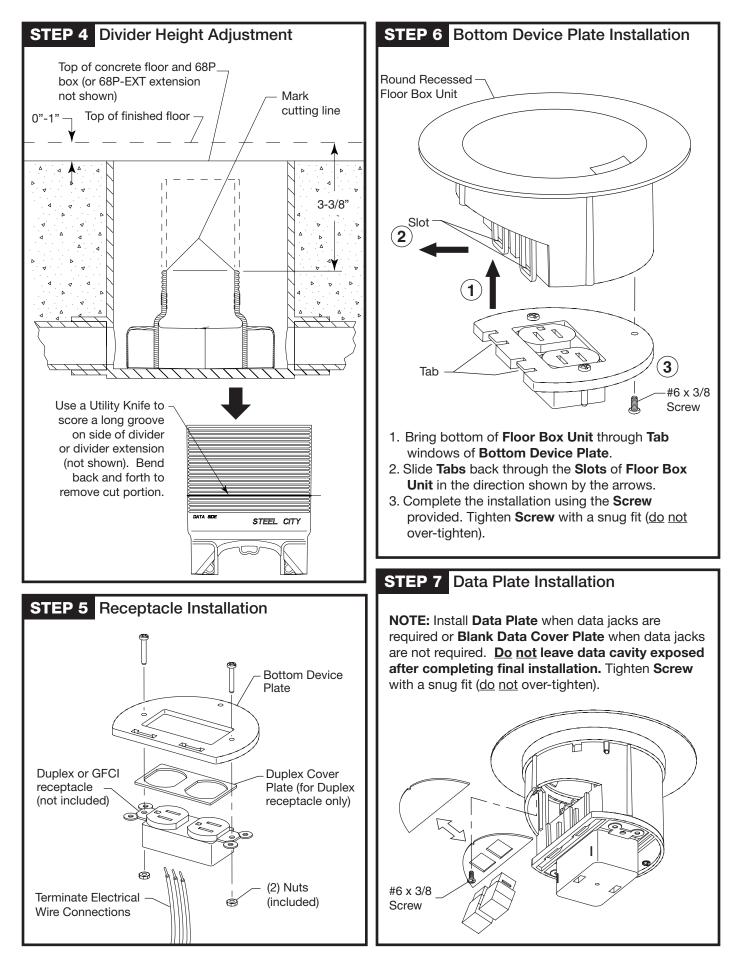


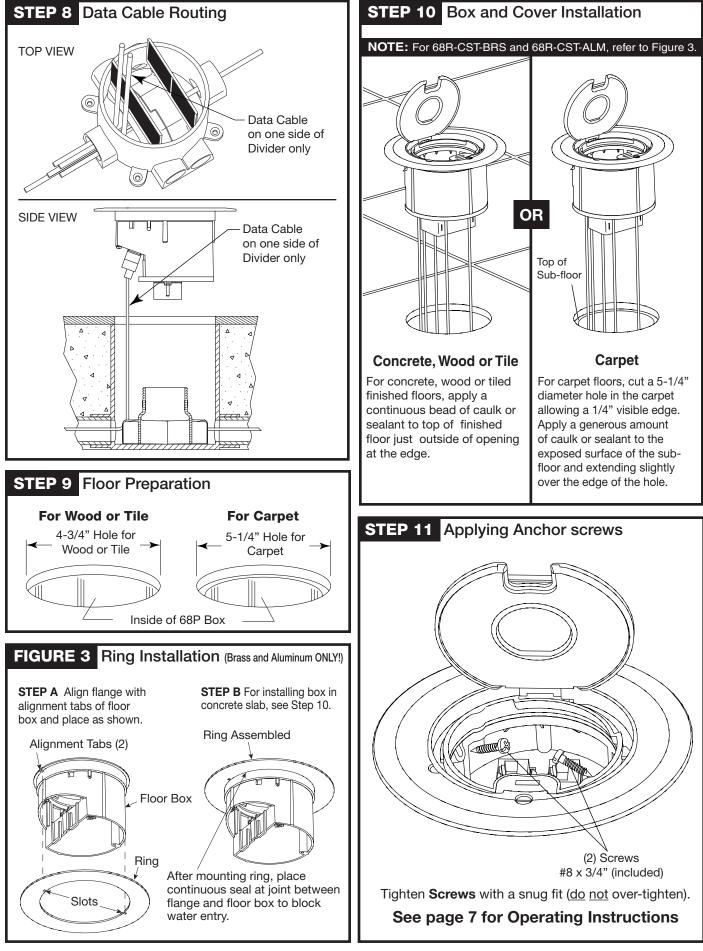


TA03866 D page 4 of 8


# **CONTENTS AND FEATURES:**

#### **Metallic Floor Box**

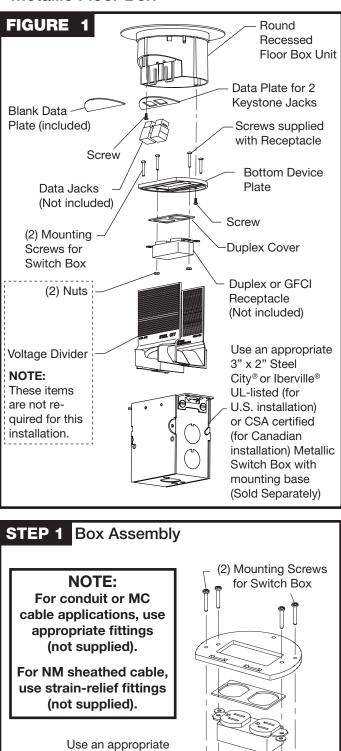

3" x 2" Steel City® or Iberville<sup>®</sup> UL-listed (for U.S. installation) or CSA certified (for Canadian installation) Metallic Switch Box with mounting base

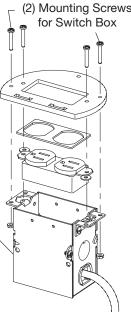


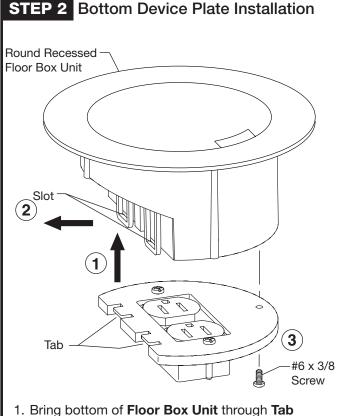


- windows of Bottom Device Plate.
- 2. Slide **Tabs** back through the **Slots** of **Floor Box** Unit in the direction shown by the arrows.
- 3. Complete the installation using the Screw provided. Tighten Screw with a snug fit (do not over-tighten).

### **STEP 3** Data Plate Installation


NOTE: Install Data Plate when data jacks are required or Blank Data Cover Plate when data jacks are not required. Do not leave data cavity exposed after completing final installation. Tighten Screw with a snug fit (do not over-tighten).

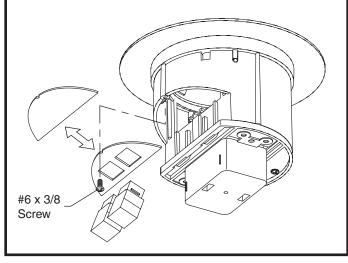

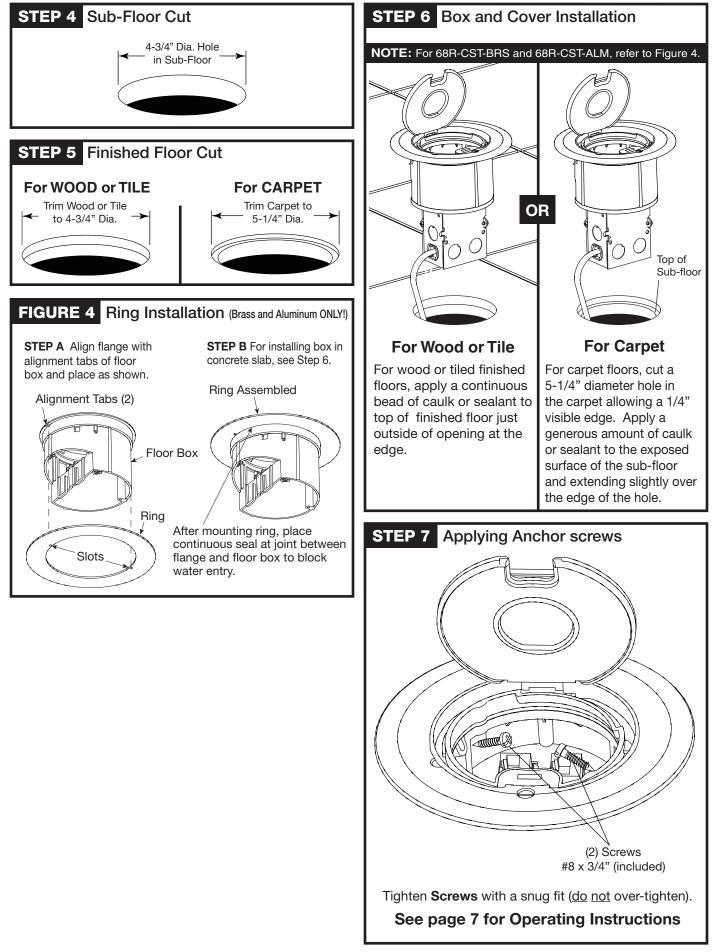

# **68R ROUND RECESSED FLOOR BOX**

**OPERATING INSTRUCTIONS** 

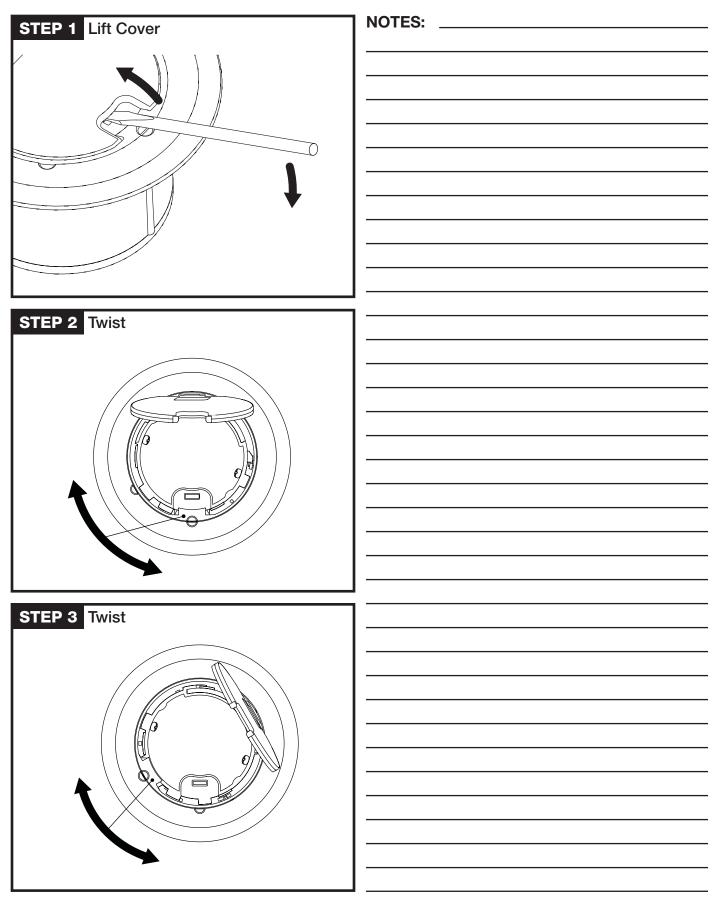

**WARRANTY:** Thomas & Betts sells this product with the understanding that the user will perform all necessary tests to determine the suitability of this product for the user's intended application. Thomas & Betts warrants that this product will be free from defects in materials and workmanship for a period of two (2) years following the date of purchase. Upon prompt notification of any warranted defect, Thomas & Betts will, at its option, repair or replace the defective product or refund the purchase price. Proof of purchase is required. Misuse or unauthorized modification of the product voids all warranties.

Limitations and Exclusions: THE ABOVE WARRANTY IS THE SOLE WARRANTY CONCERNING THIS PRODUCT, AND IS IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANT-ABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE SPECIFICALLY DISCLAIMED. LIABILITY FOR BREACH OF THE ABOVE WARRANTY IS LIMITED TO COST OF REPAIR OR REPLACEMENT OF THE PRODUCT, AND UNDER NO CIRCUMSTANCES WILL THOMAS & BETTS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

> Thomas & Betts Corporation Memphis, Tennessee www.tnb.com