



## **INSTRUCTION SHEET** for Ground Grid Connectors

**Cat. Nos.** GG10-10, GG21-21, GG2030-10, GG2030-21, GG2030-2030, GG40250-10, GG40250-21, GG40250-2030, GG40250-40250, GG500-500, GG500-40250, GG500-350, GG500-2030, GG350-350

INSTALLING TOOLS: 13100A, TBM14CR-LI, TBM14M, TBM15CR-LI, TBM15I, and TBM15PF

Refer to opposite side of this instruction sheet for conductor sizes and installing die code information for catalog numbers listed above.

## **INSTRUCTIONS:**

**NOTE:** Install these connectors on ground rods after the rods have been driven to their final depth.

- 1. Clean cable of all visible dirt with rough cloth or brush and provide a bright copper finish by wire brushing or similar process.
- 2. Use knurling tool 240-31565-94 on smooth ground rods. Kopr-Shield\* and other compounds are not recommended on ground rods.


  \*Registered tradmark of JET-LUBE, Inc.
- 3. Match hydraulic head die code number to connector die code number.
- 4. Place cable in cable bore of connector.
- 5. Place connector on one of the die halves as shown in Figure 2.
- 6. Perform one, two or three crimps.
- 7. Final crimp shown in Figure 3.


**NOTE:** Embossed die numbers on hex flats indicate the proper installing die has been for inspection purposes.


Die Code	Cat. No.					
29	15527-CK					
33	15528 15513-CK 15526 15530					
37						
45						
50						
54H	15511					
60	15532-CK					
71H	15514					
76	15512					
80H	15517					
87H	15506					

Die

Installing

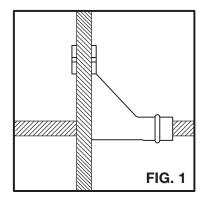

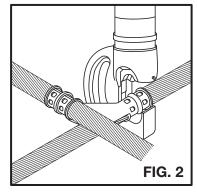

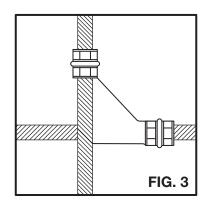




WARRANTY: Thomas & Betts sells this product with the understanding that the user will perform all necessary tests to determine the suitability of this product for the user's intended application. Thomas & Betts warrants that this product will be free from defects in materials or workmanship for a period of two (2) years following the date of purchase. Upon prompt notification of any warranted defect, Thomas & Betts will, at its option, repair or replace the defective product. Misuse, misapplication or modification of Thomas & Betts Products immediately voids all warranties.

Limitations and Exclusions: THE ABOVE WARRANTY IS THE SOLE WARRANTY CONCERNING THIS PRODUCT, AND IS IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE SPECIFICALLY DISCLAIMED. LIABILITY FOR BREACH OF THE ABOVE WARRANTY IS LIMITED TO COST OF REPAIR OR REPLACEMENT OF THE PRODUCT, AND UNDER NO CIRCUMSTANCES WILL THOMAS & BETTS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

## FOR CONNECTING GROUND RODS TO STRANDED OR SOLID COPPER. OR FOR CONNECTING STRANDED COPPER CABLE TO STRANDED COPPER CABLE.

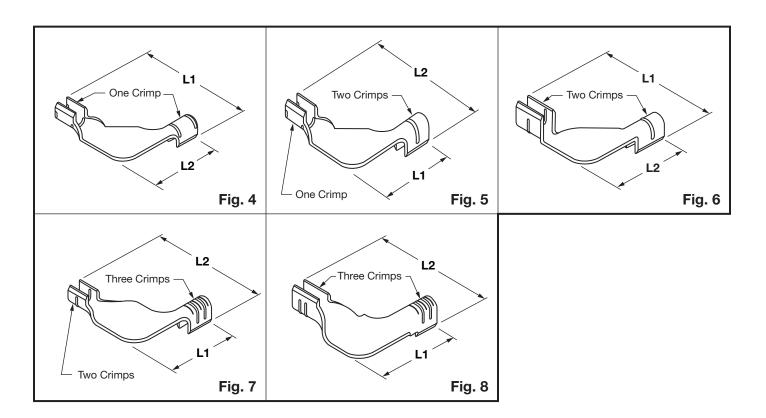

Cat. No.	Fig.	Cable to Cable Range			Rod to Cable Range				Overall Dim.		
		Main	Die Code	Branch	Die Code	** Rod BBL	Die Code	Cable BBL	Die Code	L1	L2
GG10-10	4	1/0	54H	1/0	54H	_	_	_	_	2"	2"
GG21-21	4	#2 or #1	45	#2 or #1	45	_	_	_	_	2-1/8"	2-1/8"
GG2030-10	5	2/0 or 3/0	60	1/0	54H	_	_	_	_	2-23/32"	3-7/32"
GG2030-21	5	2/0 or 3/0	60	#2 #1	45 50	_	_	_	_	2-27/32"	3-5/32"
GG2030-2030	6	2/0 or 3/0	60	2/0 or 3/0	60	_	_	_	_	3-11/32"	3-11/32"
GG40250-10	5	4/0 or 250 MCM	71H	1/0	54H	1/2" 5/8"	71H 80H	1/0	54H	3"	2-1/2"
GG40250-21	5	4/0 or 250 MCM	71H	#2 #1	45 50	1/2" 5/8"	71H 80H	#2 #1	45 50	3"	2-1/2"
GG40250-2030	6	4/0 or 250 MCM	71H	2/0 or 3/0	60	1/2" 5/8"	71H 80H	2/0 or 3/0	60	3-21/32"	4-3/16"
GG40250-40250	6	4/0 or 250 MCM	71H	4/0 or 250 MCM	71H	1/2" 5/8"	71H 80H	4/0 or 250 MCM	71H	3-3/16"	3-3/16"
GG500-500	8	500 MCM	87H	500 MCM	87H	5/8" 3/4"	87H	500 MCM	87H	6-3/8"	6-3/8"
GG500-40250	7	500 MCM	87H	4/0 or 250 MCM	71H	5/8" 3/4"	87H	4/0 or 250 MCM	71H	4-3/8"	3-1/2"
GG500-350	7	500 MCM	87H	350 MCM	80H	5/8" 3/4"	87H	350 MCM	80H	5-1/2"	4-3/4"
GG500-2030	7	500 MCM	87H	2/0 or 3/0	60	5/8" 3/4"	87H	2/0 or 3/0	60	5"	4-1/8"
GG350-350	6	350 MCM	80H	350 MCM	80H	_	_	_	_	4-7/16"	4-7/16"

<sup>\*\*</sup> See Step 2 on page 1 of 2.

INSTALLING TOOL: T&B Cat. Nos. 13100A, TBM14CR-LI, TBM14M, TBM15CR-LI, TBM15I, and TBM15PF Hydraulic Tools. INSTALLING DIES: T&B Method Hex Compression.