
Thomas@Betts

RATCHET CABLE CUTTER

OPERATION AND MAINTENANCE INSTRUCTIONS

For Catalog Number CSR750 750 MCM Capacity

Maximum O.D. of Cable not to exceed 1.25" (including Insulation)

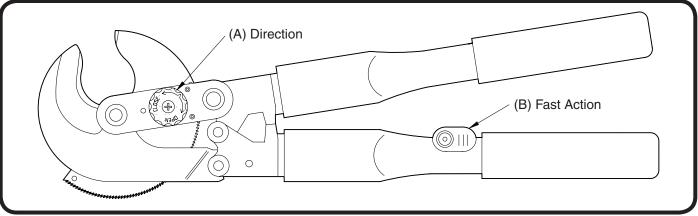



- DO NOT CUT STEEL OR ACSR
- DO NOT CUT LIVE CONDUCTORS
- WEAR SAFETY GOGGLES
- KEEP FINGERS AND OTHER BODY PARTS AWAY FROM CUTTING BLADE AND CLOSURE POINTS.

01

OPERATION

- 1. Turn direction knob (A) to open or close blades.
- 2. Move handles open and closed. Blade will ratchet as indicated by the direction knob (A).
- 3. To rapidly open or close blades, <u>Push and Hold</u> fast action thumb slide (B) forward while moving handles. This will permit the handles to open farther for faster blade movement. Cutting cable in fast action will reduce leverage and require greater force.

WARRANTY: Thomas & Betts sells this product with the understanding that the user will perform all necessary tests to determine the suitability of this product for the user's intended application. Thomas & Betts warrants that this product will be free from defects in materials and workmanship for the period stated on the enclosed warranty card. Upon prompt notification of any warranted defect, Thomas & Betts will, at its option, repair or replace the defective product or refund the purchase price. Proof of purchase is required. Misuse or unauthorized modification of the product voids all warranties.


Limitations and Exclusions: THE ABOVE WARRANTY IS THE SOLE WARRANTY CONCERNINGTHIS PRODUCT, AND IS IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE SPECIFICALLY DISCLAIMED. LIABILITY FOR BREACH OF THE ABOVE WARRANTY IS LIMITED TO COST OF REPAIR OR REPLACEMENT OF THE PRODUCT, AND UNDER NO CIRCUMSTANCES WILL THOMAS & BETTS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

02 MAINTENANCE TIPS

SHARPENING INSTRUCTIONS:

Follow direction of arrows with stone or very fine file over entire blade radius

- 1. Stone wiping surface flat near edge.
- 2. Stone existing angle (35°) to remove nicks.
- 3. Stone very lightly on 45° angle to remove burrs.
- 4. Clean blades of grit.

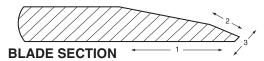



CAUTION



Keep blades clean and oiled.

Tighten fulcrum nut periodically. (220-250 in. lb. torque) Keep handle bolts tight. (30-50 in. lb. torque)

Parts are replaceable at the factory only. Contact Thomas & Betts Tool Service at 1-800-284-TOOL (8665).