TORQUE TABLE (LB. IN)			
TORQUE TABLE (LB. III)			
LUG CONDUCTOR	14-4	14-2/0	6-4/0
14~10	20	35	-
8	25	40	-
6~4	35	45	50
3~1	-	50	50
1/0~2/0	-	50	75
3/0~4/0	_	_	75


WARRANTY: Thomas & Betts sells this product with the understanding that the user will perform all necessary tests to determine the suitability of this product for the user's intended application. Thomas & Betts warrants that this product will be free from defects in materials and workmanship for a period of two (2) years following the date of purchase. Upon prompt notification of any warranted defect, Thomas & Betts will, at its option, repair or replace the defective product or refund the purchase price. Proof of purchase is required. Misuse or unauthorized modification of the product voids all warranties.

Limitations and Exclusions: THE ABOVE WARRANTY IS THE SOLE WARRANTY CONCERNING THIS PRODUCT, AND IS IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE SPECIFICALLY DISCLAIMED. LIABILITY FOR BREACH OF THE ABOVE WARRANTY IS LIMITED TO COST OF REPAIR OR REPLACEMENT OF THE PRODUCT, AND UNDER NO CIRCUMSTANCES WILL THOMAS & BETTS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Thomas & Betts Corporation Memphis, Tennessee www.tnb.com

T&B° Fittings


INSTALLATION INSTRUCTIONS FOR INSULATED GROUNDING BUSHINGS

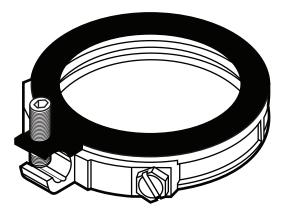

Thomas Betts

INSULATED GROUNDING BUSHING (THREADED AND THREADLESS)

Suitable for use with copper or aluminum wire

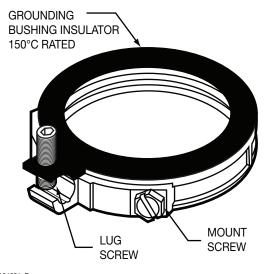

BG050-14-4 AND BGA050-14-4 SERIES FOR THREADED AND THREADLESS APPLICATION

- Place bushing onto conduit and rotate until lug is in desired location.
- 2. Tighten mount screw to secure bushing onto conduit.
- 3. Install bonding jumper and torque lug screw to values in table.