NET-ACCESS S-Type Server Cabinets
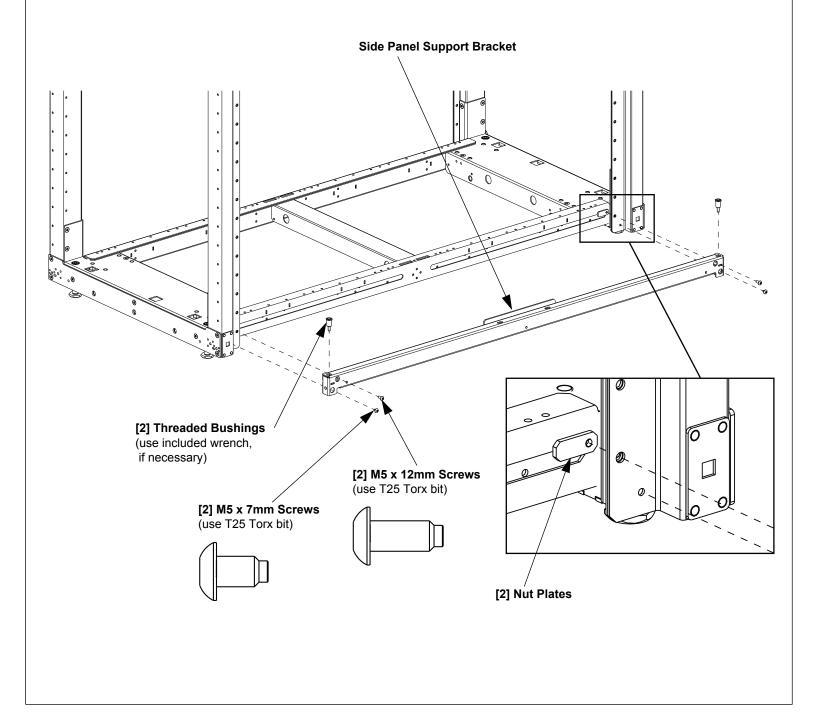**(Side Panels - S21SPSE, S51SPSE, S22SPSE, S52SPSE, S81SPSE, S82SPSE, S11SPSE, S12SPSE)**

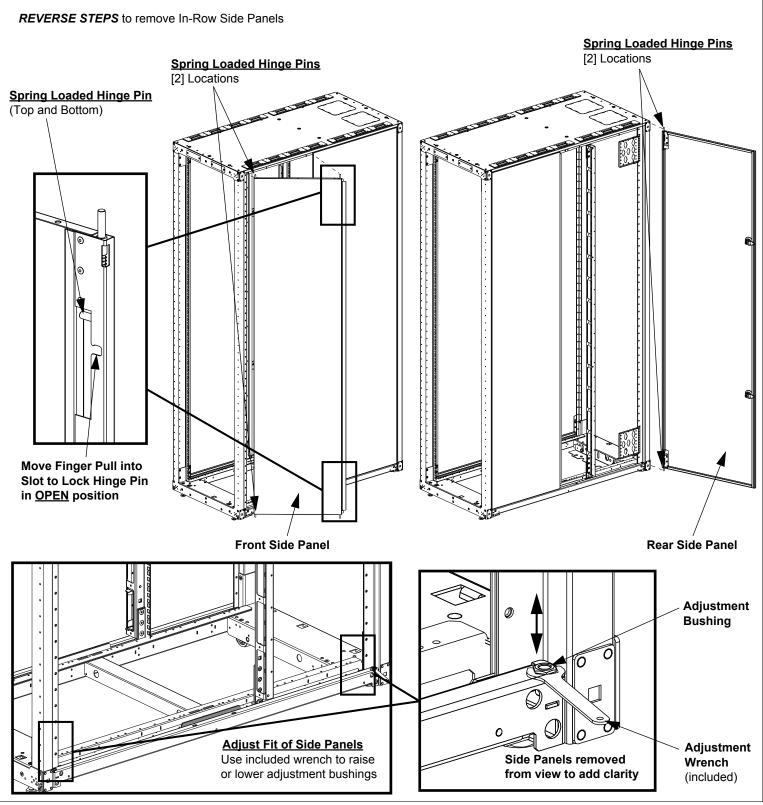**INSTRUCTIONS V00029CC**

Side Panel Support Bracket Installation

-Insert [2] Threaded Bushings into Side Panel Support Bracket --- use included wrench to tighten bushings *(if necessary)*
-Secure Side Panel Support Bracket to cabinet frame with [4] M5 Torx Screws
    -[2] M5 X 12mm Torx screws secure to [2] Nut Plates positioned on inside of cabinet frame
    -[2] M5 X 7mm Torx screws secure Side Panel Support Bracket directly to cabinet frame

Side Panel Support Bracket

[2] Threaded Bushings
(use included wrench,
 if necessary)

[2] M5 x 12mm Screws
(use T25 Torx bit)

[2] M5 x 7mm Screws
(use T25 Torx bit)

[2] Nut Plates

Side Panels *(Removal/Installation and Adjustment - optional)*

- Pull and release [4] Spring Loaded Hinge Pins to install Front Side Panel onto cabinet frame
- Pull and release [2] Spring Loaded Hinge Pins to install Rear Side Panel onto cabinet frame
- Close rear side panel and set both locks to <u>LOCKED</u> position

REVERSE STEPS to remove In-Row Side Panels

Spring Loaded Hinge Pins
[2] Locations

Spring Loaded Hinge Pins
[2] Locations

Spring Loaded Hinge Pin
(Top and Bottom)

**Move Finger Pull into
Slot to Lock Hinge Pin
in <u>OPEN</u> position**

Front Side Panel

Rear Side Panel

**Adjustment
Bushing**

Adjust Fit of Side Panels
Use included wrench to raise
or lower adjustment bushings

**Side Panels removed
from view to add clarity**

**Adjustment
Wrench**
(included)