


°STELPRO


INSTALLATION OF THE PROTECTION GRID FOR THE BUILT-IN BASEBOARD THERMOSTAT

SIBT1W
B1T1W
B1T1SW
B2T1W
B2T1SW
B2T1TPW

PROCEDURE

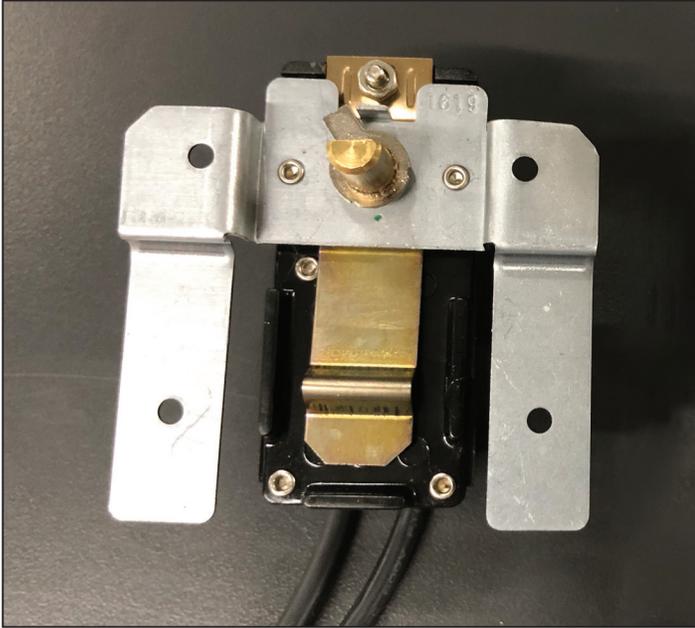


THERMOSTAT WITHOUT THE PROTECTION GRID

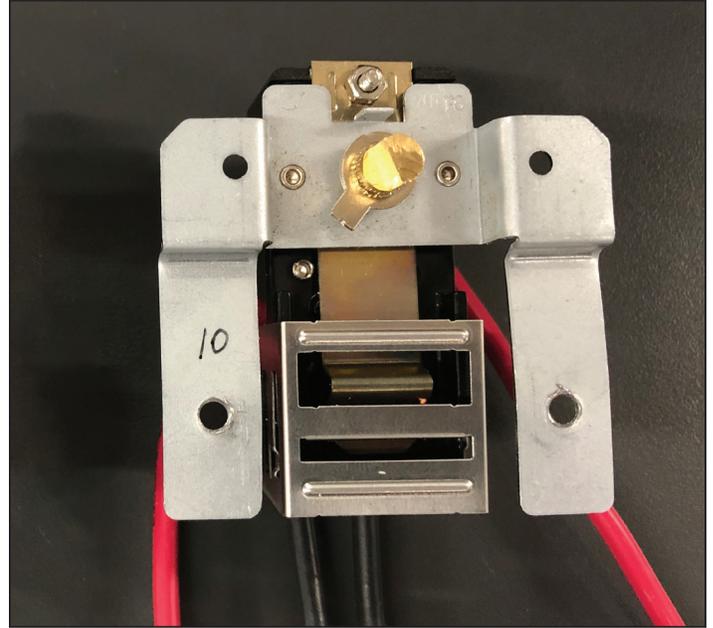

THERMOSTAT WITH THE PROTECTION GRID



THERMOSTAT INSTALLED WITHOUT THE PROTECTION GRID

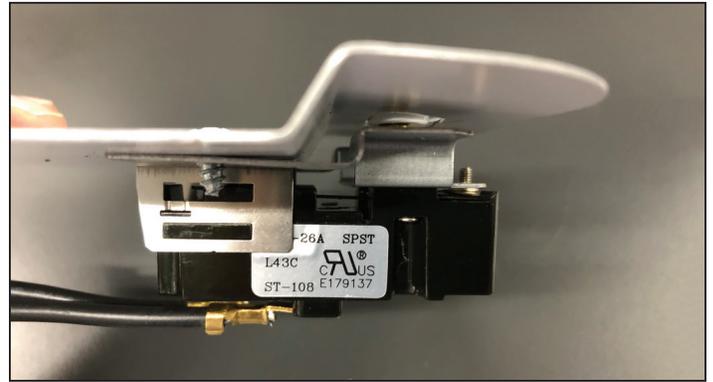


THERMOSTAT INSTALLED WITH THE PROTECTION GRID

WARNING: The thermostat's protection grid must be installed by a certified electrician in accordance with the electrical and building codes in effect in your area.

1 SWITCH OFF THE POWER SUPPLY


To protect yourself against the risk of electric shock, switch off the power supply to the electrical wires at the electrical panel.

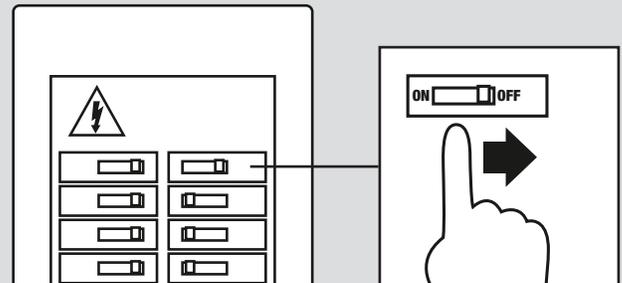

2

REMOVE THE FRONT PANEL


Remove the front panel [A]. Unscrew the junction box cover where the thermostat is installed and remove it.

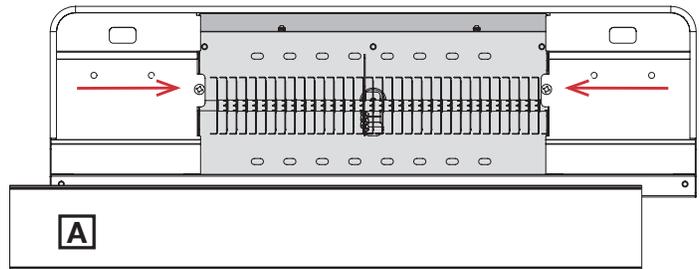

3

INSTALL THE PROTECTION GRID

1. Slide the protection grid into place as shown in the picture. The angled side of the grid must be facing outwards.

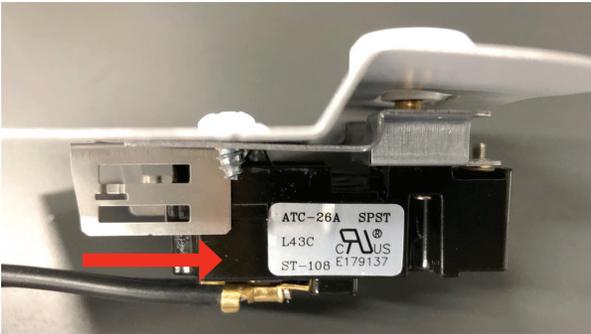

2. Make sure that the protection grid is properly clipped in.



4

CLOSE THE JUNCTION BOX AND RE-ATTACH THE FRONT PANEL

5

RESTORE THE POWER SUPPLY

