


DEAD FRONT KNOCKOUT REMOVAL INSTRUCTIONS

- 11. Stand the deadfront on the floor with the plate to be removed in the upper position as shown below. Grasping the upper edge of the deadfront, strike the center of the front surface of the knockout plate with a hammer until two of the plate attachment splices are broken.
- 12. Bend the plate back-and-forth about the two remaining attachments until the plate breaks free.

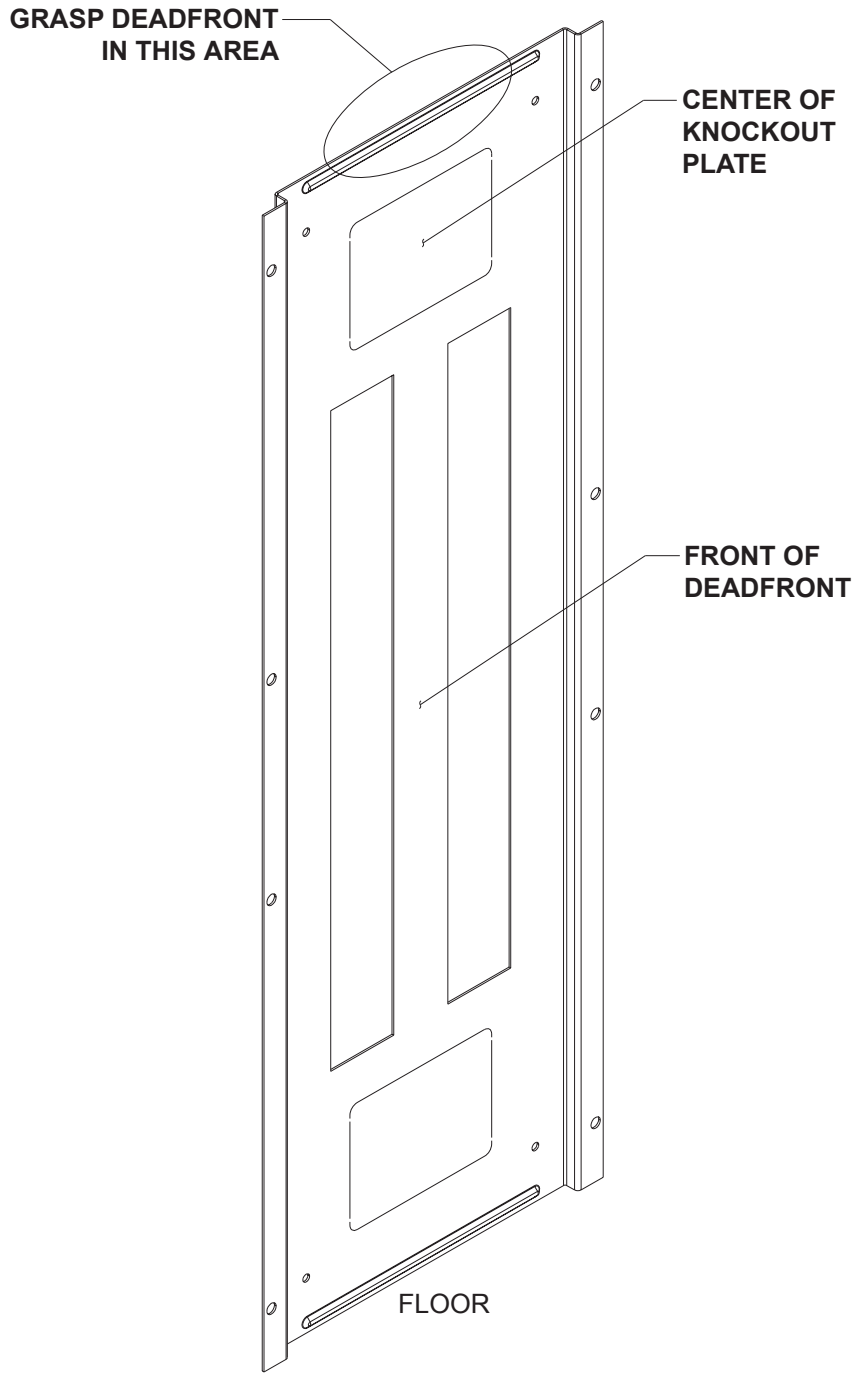

SIEMENS

S1, S2, and P1 Panelboard Kit  
MBKED1 for Main or Subfeed  
ED breakers

Installation  
Instructions

