

TMEH2S HD Mount Installation Instructions


1. Panduit TMEH2Sx-D350 series mount Installation steps:

1.1 Preparation: refer to the table below to prepare the HD mount, cable tie, related size of bolt, washer, and nut before installation.


Item	Part Number	Part Description	Bolt (inch)	Bolt (mm)
1	TMEH2S5-D350	HD mount standard torque 3/16"	#10	M5
2	TMEH2S6-D350	HD mount standard torque 1/4"	1/4	M6
3	TMEH2S8-D350	HD mount standard torque 5/16"	5/16	M8

1.2 Attach the HD mount to base using a bolt, washer, and nut as shown below.

1.2.1 **NOTE:** Max. torque allowance is 115 lbs-in (13 N-m).

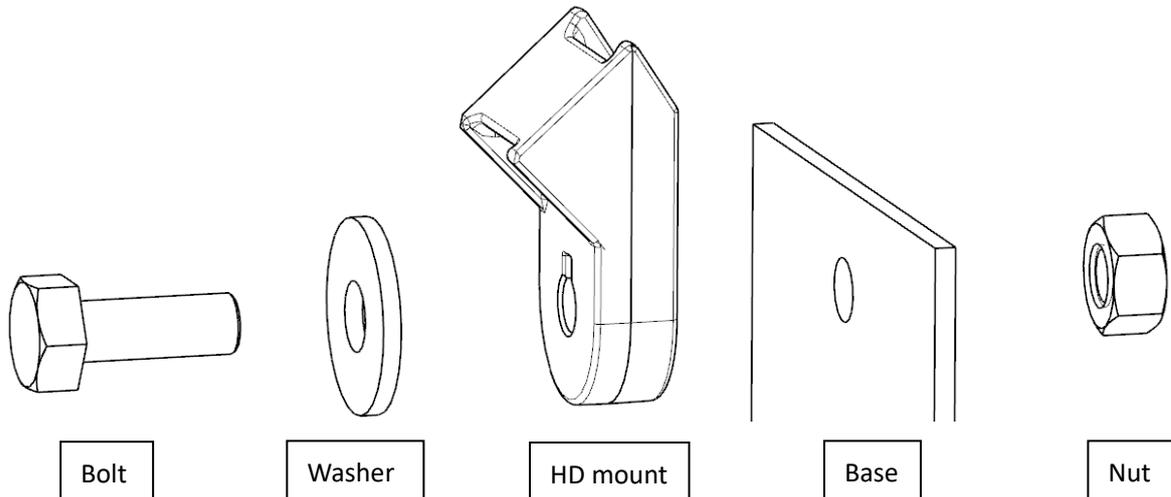


1.3 Insert cable tie through the HD mount as shown below:

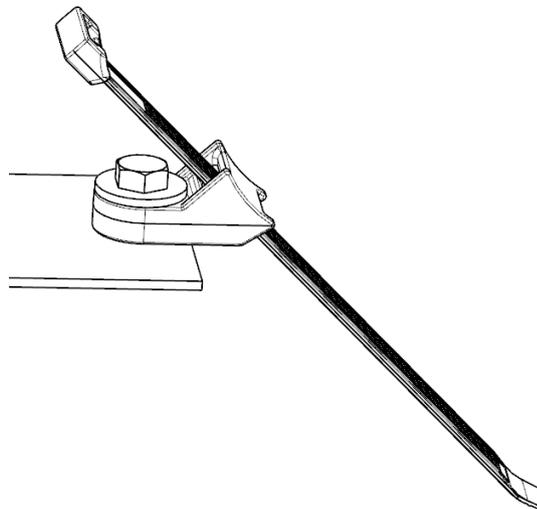

1.4 Loop the cable tie body around hoses, cables, wires, etc. and then thread the cable tie body through the head of the cable tie.

1.4.1 Tighten the cable tie around the bundle and cut off the excess cable tie as shown below:

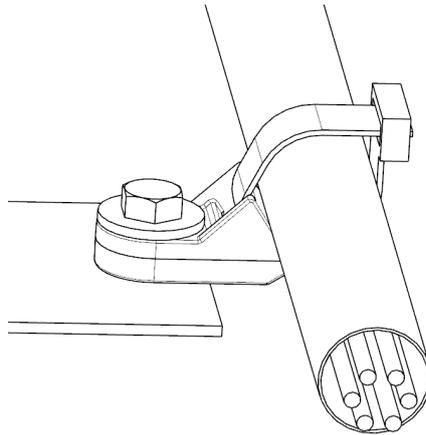

Document Revision History:

Rev.	Date	By:	Description of Change
AA	4/16/2017	FCHE	Initial release
AB	11/20/2023	DAEI	Updated wording in Section 1. Removed Section 2 (part #'s with pre-assembled cable ties were discontinued).