

INSTALLATION INSTRUCTIONS FOR 4" SPECULAR BAFFLE TRIM

INSTRUCTION D'INSTALLATION POUR 4 PO GARNITURE L'SPECULAIRE

Important:


Read all instructions before installing trim. Retain for future reference.

Important :

Lire attentivement ces directives avant d'installer l'garniture. Conserver ces instructions pour consultation ultérieure.

Installation / Installation:


1

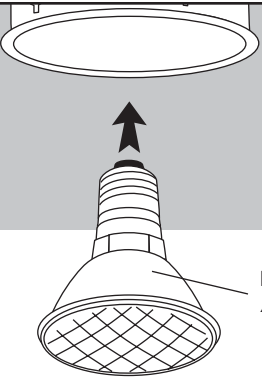

PAR20 or R20 Lamp
Ampoule PAR20 ou R20

Secure a PAR20 or R20 lamp (not included) into medium base socket on housing.
Fixez la ampoule PAR20 ou R20 (non inclus) dans la culot moyenne douille sur le boîtier.

2

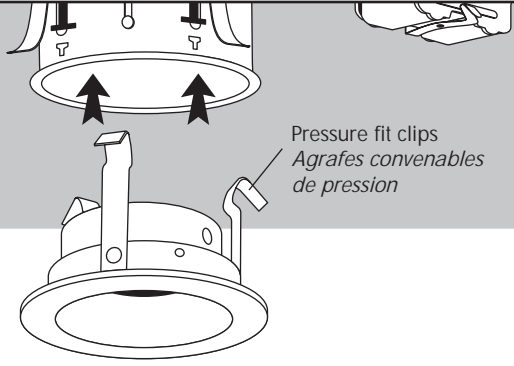

Pressure fit clips
Agrafes convenables de pression

Push trim assembly into housing, allowing pressure fit clips on the trim to lock into place.
Poussez l'garniture assembly dans le boîtier, en permettant à des agrafes convenables de pression sur l'garniture de fermer dans en place.