

RECESSED LIGHTING • LUMINAIRE ENCASTRÉ

4" SCREW DOWN "C" STYLE REMODEL HOUSING • LINE VOLTAGE 120V

BOÎTIER RÉNOVATION STYLE «C», 4 PO • TENSION DE LIGNE 120V

RF402C

FIG. 1


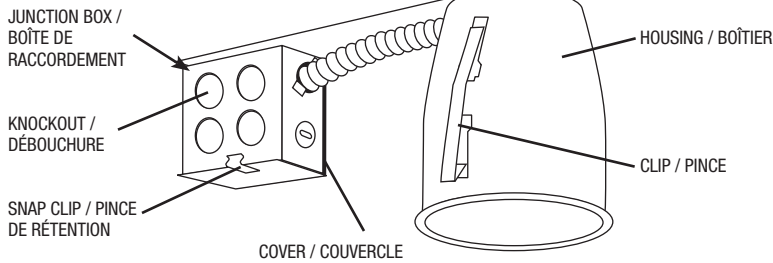


FIG. 2

QUICK CONNECT PUSH-IN TERMINALS / BORNES À BOUTON

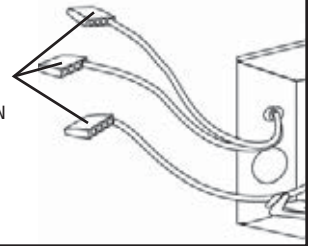

INSTALLATION INSTRUCTIONS

IMPORTANT:

1. Read all instructions before installing housing. Retain for future reference.
2. Not for use in insulated ceilings.

SAFETY: This housing must be wired in accordance with local electrical codes and ordinances. Carefully observe grounding procedure under installation section. All work should be done by a qualified electrician.

WARNING: Make certain power is OFF from the electrical panel before starting installation or attempting any maintenance.

TOOLS REQUIRED

Keyhole saw, wire strippers, tape measure and screw driver.

INSTALLATION FOR REMODEL APPLICATION


1. Measure distance from walls and mark position of housing to be installed on ceiling.
2. Using template provided, carefully scribe circle on desired location.
3. Carefully cut hole in ceiling with keyhole saw.
4. Follow steps 1 through 4 under "electrical connections".
5. Insert housing into ceiling (junction box first).
6. Hold housing flush against ceiling. Push out clips and fasten fixture to the ceiling by tightening the two screws located in the clips.
7. Install the 4" (102mm) recessed trim according to trim installation instructions below.

ELECTRICAL CONNECTION

1. Provide electrical service according to your local electrical code for a suitable junction box. Supply wire insulation must be rated for at least 90°C.
2. Remove the junction box cover. Remove the appropriate knock-out(s) to accommodate the type of electrical service to be used.
3. Insert electrical supply cable through knock-out in the junction box. Wire housing using quick connect push-in terminals (Fig. 2). Connect green ground wire of cable to green wire on fixture. Connect black wire of cable to black wire of fixture. Connect white wire of cable to white wire of fixture. Make certain there are no exposed strands of wire.
4. Place all wiring and connections back in junction box and replace cover.

These instructions do not claim to cover all details or variations in the equipment, procedure, or process described, nor to provide directions for meeting every possible contingency during installation, operation or maintenance. When additional information is desired to satisfy a problem not covered sufficiently for user's purpose, please call the technical support toll free number listed below.

FIG. 3

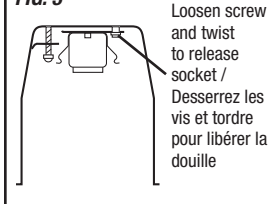


Loosen screw and twist to release socket / Desserrez les vis et tordre pour libérer la douille

INSTALLATION


1. Loosen the socket from top of the housing (Fig. 3).
 2. Install a CSA approved 120V medium base MR16, R20, PAR20 or BR30 lamp into the socket.
 3. If installing HV4-TH4018 or HV4-TH4018R trim, remove the bracket and clip from the top of the socket (Fig. 4a / 4b).
 4. Install the lamp into the trim.
 5. Push trim and lamp into the housing. Ensuring trim is flush with ceiling.
- For lamp replacement, visit www.liteline.com.
For proper type of bulb and wattage, consult maximum wattage label on the product.

FIG. 4a

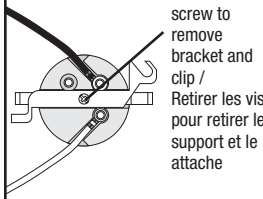

Remove screw to remove bracket and clip / Retirer les vis pour retirer le support et le attache

FIG. 4b

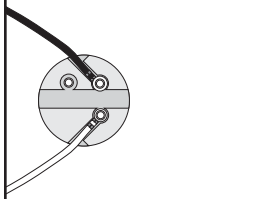

STUCCO STOPPER® (Fig. 5, 6, 7)

- Do not energize fixture while Stucco Stopper® is in place.
- Do not remove Stucco Stopper® until completion of painting / Stucco application.
- Retain Stucco Stopper® for future use.

INSTRUCTIONS D'INSTALLATION

IMPORTANT :

1. Lire attentivement ces directives avant d'installer l'appareil. Conserver ces instructions pour consultation ultérieure.
2. Ne pas utiliser dans des plafonds isolés.

SÉCURITÉ : L'appareil doit être câblé selon les dispositions du code électrique national, des ordonnances et des codes régionaux. Une bonne mise à la terre est nécessaire pour assurer la sécurité personnelle. Suivre attentivement les instructions ci-dessous portant sur la mise à la terre. Tout travail doit être effectué par un électricien qualifié.

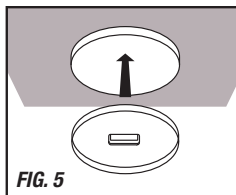


FIG. 5

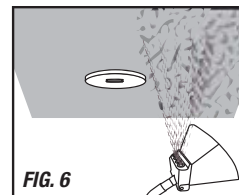


FIG. 6

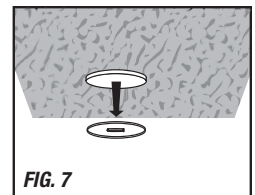


FIG. 7

**IMPROPER INSTALLATION
MAY RESULT IN FIRE**

**WARNING
NOT FOR USE IN
INSULATED CEILINGS**

**LA MAUVAISE
INSTALLATION PEUT
CAUSER UN INCENDIE**

**AVERTISSEMENT
NE PAS UTILISER DANS
DES PLAFONDS ISOLÉS**

LAMP/TRIM



LITELINE CORPORATION
info@liteline.com
www.liteline.com

8 Abacus Road
Brampton, Ontario
Canada L6T 5B7

PHONE | TÉLÉPHONE
416-996-1856
1-866-730-7704

TECHNICAL SUPPORT
SOUTIEN TECHNIQUE
905-794-2137 | 1-866-730-7704

REV014-6.24-11

- d'alimentation. Assurez-vous qu'aucun brin de fil provenant des conducteurs n'est laissé exposé.
- Insérer tous les fils et toutes les connexions dans la boîte de câblage. Remettre le couvercle.

Ces instructions ne prétendent pas couvrir tous les détails ni toutes les variations de l'équipement, des directives ou du procédé décrit, ni de parer à tout éventualité qui pourrait survenir pendant l'installation, le fonctionnement ou l'entretien. Si des renseignements supplémentaires sont requis pour remédier à un problème non suffisamment couvert aux fins de l'utilisateur, prière notre représentant de soutien technique au numéro ci-dessous.

INSTALLATION D'AMPOULE/GARNITURE

- Desserrez les douille à partir du dessus de l'appareil (Fig. 3).
- Installez dans la douille une ampoule à base moyenne approuvée par CSA MR16, R20, PAR20 ou BR30 120 V.
- Retirer le support et le attache du haut de la douille si vous installez l'garniture HV4-TH4018 ou HV4-TH4018R (Fig. 4a / 4b).
- Installez l'ampoule avec la douille attachée dans la garniture.
- Poussez la garniture et l'ampoule dans le boîtier. Assurez la garniture est plat avec le plafond.

Pour remplacez l'ampoule visitez www.liteline.com.

Pour le type d'ampoule et consommation en watts requis, consultez l'étiquette de consommation en watts maximum sur le produit.

STUCCO STOPPER® (Fig. 5, 6, 7)


- Retirer le «Stucco Stopper®» seulement après d'allumer le luminaire.
- Ne retirez pas le «Stucco Stopper®» avant le peinture/Stucco.
- Conserver ce «Stucco Stopper®» pour un usage à l'avenir.

ACCESSORIES

P-4000

4" New Construction pre-mounting plates.

For use with screw down "C" style remodel housing only (not included).



ACCESSOIRES

P-4000

Plaques de montage de 4 po Nouveau Plafond.

Pour usage avec boîtier rénovation style «C» seulement (non inclus).

