

Motion and Accessory Switch Guide

**NEMA Ratings are for switches when properly installed in their respective pendants.



SINGLE SPEED INSERTS

Ref	Catalog No.	Description - Contacts	J	L	RPB	PSW RPS	Sq D SKYP	**NEMA RATING
A	SP-1	One Speed-2 N.O.		X ²				4X
A	SP-1-S	One Speed-2 N.O. 2 N.C.		X ²				4X
B	RB-1	One Speed-1 N.O. 1 N.C.			X ¹			4
C	PB-1A	One Speed-2 N.O.	X			X		12
C	PB-1B	One Speed-2 N.O.	X ²			X ²		12
D	9001SKRU1	One Speed-2 N.O.					X	4X
			X ¹	= Requires 2 each per motion				
			X ²	= Mechanical Interlocking				

TWO SPEED INSERTS

Ref	Catalog No.	Description - Contacts	J	L	RPB	PSW RPS	Sq D SKYP	**NEMA RATING
A	SP-2	Two Speed-4 N.O.		X ²				4X
A	SP-2-S	Two Speed-4 N.O. 4 N.C.		X ²				4X
B	RB-2A	Two Speed-2 N.O.			X			4
D	9001SKRU2	Two Speed-4 N.O.					X	4X
			X ¹	= Requires 2 each per motion				
			X ²	= Mechanical Interlocking				

*For Normal 2 Speed Switch Insert use PB-3A and PB-3B and Wire for Two Speed Operation.

THREE AND FIVE SPEED INSERTS

Ref	Catalog No.	Description - Contacts	J	L	RPB	PSW RPS	Sq D SKYP	**NEMA RATING
A	SP-3	Three Speed-6 N.O. 2 N.C.		X ²				4X
C	PB-3A	Three Speed-6 N.O.	X			X		12
C	PB-3B	Three Speed-6 N.O.	X ²			X ²		12
C	PB-5A	Five Speed-10 N.O.	X			X		12
C	PB-5B	Five Speed-10 N.O.	X ²			X ²		12
D	9001SKRU3	Three Speed-6 N.O.					X	4X
D	9001SKRU5	Five Speed-10 N.O.					X	4X
			X ²	= Mechanical Interlocking				


Locate Pendant Series and select the available Accessory or Motion Insert(s) available

Pictures are for illustration purposes and may not represent actual product.

All Push Button Pendant Stations are Intended and Approved for 120 VAC Operation - Not Suitable for DC Circuits

Motion and Accessory Switch Guide

**NEMA Ratings are for switches when properly installed in their respective pendants.

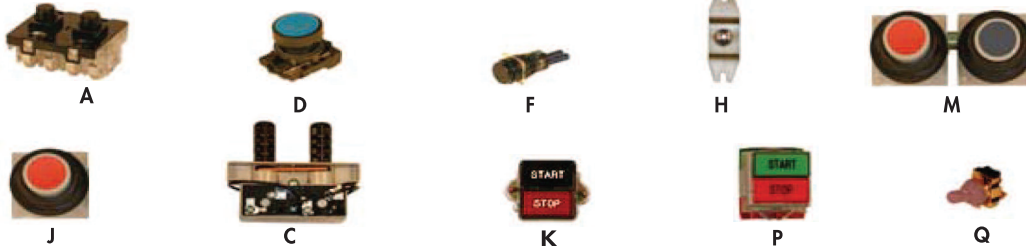

MOMENTARY START / STOP INSERTS AND SWITCHES

Ref	Catalog No.	Description-Contacts	J	L	RPB	PSW RPS	Sq D SKYP	**NEMA RATING
A	SP-A	Two Button-1 N.O. 1 N.C.		X				4X
D	LS-MS	One Button-1 N.O.	X	X ⁴		X	X ³	4X
D	LS-MS-LED-x	One Button-1 N.O. "x" = color	X	X		X	X ³	4X
F	LS-H	One Button-1 N.O.	X ³	X ³		X ³	X ³	12
H	K-1A	One Button-1 N.O.			X			4
J	PB-1-S	One Button-1 N.O. 1 N.C.	X			X	X	4X
C	PB-ST	Two Button-1 N.O. 1 N.C.	X			X		12
K	PB-STA	Two Button-1 N.O. 1 N.C. (1 hole)	X ³			X ³	X ³	12
P	PB-STB	Two Button-1 N.O. 1 N.C. (1 hole)	X ³			X ³	X ³	4X
Q	RPS-MS	One Button-1 N.O.	X ³			X ³	X ³	1
			X ³	= Accessory area only				

MAINTAINED START / STOP INSERTS AND SWITCHES

Ref	Catalog No.	Description-Contacts	J	L	RPB	PSW RPS	Sq D SKYP	**NEMA RATING
A	SP-M	Two Button-1 N.O. 1 N.C.		X				4X
D	LS-6A	One Button-1 N.O.	X ³	X ⁴		X ³	X ³	4X
F	LS-6A1	One Button-1 N.O.	X ³	X ³		X ³	X ³	12
H	RPB-6A1	One Button-1 N.O. "x" = color			X			4
M	PB-STM	One Button-1 N.O.	X ³			X ³	X	4X
M	PB-STM-2	One Button-1 N.O.	X ³			X ³	X	4X
K	PB-STMA	One Button-1 N.O. 1 N.C.	X ³			X ³	X ³	12
P	PB-STMB	Two Button-1 N.O. 1 N.C.	X ³			X ³	X ³	4X
			X ³	= Accessory area only				



EMERGENCY STOPS

Ref	Catalog No.	Description-Contacts	J	L	RPB	PSW RPS	Sq D SKYP	**NEMA RATING
T	LS-STMM	E-Stop-1 N.C.	X ³	X ⁴		X ³	X ³	4X
T	LS-STMM-A	E-Stop-1 N.C. 1 N.O.*	X ³	X ⁴		X ³	X ³	4X
W	PB-STMM	E-Stop-1 N.C.	X			X	X	12
			X ³	= Accessory area only				
			X ⁴	= Requires Deep Back Enclosure				

*With Built-in Momentary Start / Stop

Locate Pendant Series and select the available Accessory or Motion Insert(s) available

Pictures are for illustration purposes and may not represent actual product.

All Push Button Pendant Stations are Intended and Approved for 120 VAC Operation - Not Suitable for DC Circuits.

Motion and Accessory Switch Guide

***NEMA Ratings are for switches when properly installed in their respective pendants.



Y

SELECTOR SWITCHES



Z

Ref	Catalog No.	Description - Contacts	J	L	RPB	PSW RPS	Sq D SKYP	***NEMA RATING
Y	LS-11	Two Way (A-B) - 1 N.O. 1 N.C.	X ³	X ⁴		X ³	X ³	4X
Y	LS-12	Three Way (A-AB-B) - 2 N.C.	X ³	X ⁴		X ³	X ³	4X
Y	LS-13	Three Way - 2 N.O.*	X ³	X ⁴		X ³	X ³	4X
Y	LS-16	Three Way (A-Off-B) - 2 N.O.	X ³	X ⁴		X ³	X ³	4X
Y	LS-18	Three Way - 2 N.O.**	X ³	X ⁴		X ³	X ³	4X
Z	RPS-10	Three Way (A-B-AB) - 1 N.O. 1 N.C.	X			X	X	4X
Z	RPS-11	Two Way (A-B) - 1 N.O. 1 N.C.	X			X	X	4X
Z	RPS-12	Three Way (A-AB-B) - 2 N.O.	X			X	X	4X
Z	RPS-13	Three Way - 2 N.O. 2 N.C.*	X			X	X	4X
Z	RPS-14	Four Way (A-B-C-D) - 2 N.O. 2 N.C.	X			X	X	4X
Z	RPS-15	Three Way (Off-A-AB) - 2 N.O. 2 N.C.	X			X	X	4X
Z	RPS-16	Three Way (A-Off-B) - 2 N.O. 2 N.C.	X			X	X	4X
Z	RPS-17	Two Way (On-Off) - 2 N.O.	X			X	X	4X
Z	RPS-18	Three Way - 2 N.O. 2 N.C.**	X			X	X	4X
Z	RPS-19	Three Way (A-B-C)	X			X	X	4X
			X ³	=	Accessory area only			
			X ⁴	=	Requires Deep Back Enclosure			

* - Spring Return to Center

** - Spring Return from Right



F



A2



B2



C2



U



D



S

MISCELLANEOUS SWITCHES AND PILOT LIGHTS

Ref	Catalog No.	Description - Contacts	J	L	RPB	PSW RPS	Sq D SKYP	***NEMA RATING
F	LS-H	Horn - 1 N.O.	X ³	X ³		X ³	X ³	12
A2	LS-6	Toggle - 1 N.O.	X	X ⁴		X	X ³	4X
B2	LS-7	Key Switch - 1 N.O. Maintained Key Removable Both Positions	X	X ⁴		X	X ³	4X
B2	LS-7A	Key Switch - 1 N.O. Maintained Key Removable Left (OFF) Only	X	X ⁴		X	X ³	4X
B2	LS-7-11	Key Switch - 1 N.O. Momentary Key Removable Left (OFF) Only	X	X ⁴		X	X ³	4X
C2	RPS-7X	Key Switch - 1 N.O. 1 N.C. Maintained Key Removable Left (OFF) Only	X			X ³	X	4/13
U	LS-PL-x	Small L.E.D. Pilot "x" = color *	X ³	X ³		X ³	X ³	1
D	LS-LED-x	L.E.D. Pilot "x" = color *	X	X ⁴		X ³	X ³	4X
S	RPS-6	Toggle - 1 N.O.						1
			X ³	=	Accessory area only			
			X ⁴	=	Requires Deep Back Enclosure			

*Specify Amber, Blue, Green, Red or White.

Locate Pendant Series and select the available Accessory or Motion Insert(s) available

Pictures are for illustration purposes and may not represent actual product.

All Push Button Pendant Stations are Intended and Approved for 120 VAC Operation - Not Suitable for DC Circuits.