

IEC Manual Motor Starters Accessories

Front Mounted (Internal) Accessories—Auxiliary and Alarm Contacts

Snap away the dust cover(s) and up to two front mounted accessories slide into the starter, increasing application flexibility without increasing width.

| Accessory Type | For Use With | Mounting Position | Contact Configuration | Product Number | List Price GO-10A2C |
|--|--------------|---------------------|-----------------------|----------------|---------------------|
| Auxiliary Contact (Front Mount) | GPS1*/GPS2* | Left or right front | 1NC | GPAC01FBA | \$12.00 |
| Auxiliary Contact (Front Mount) | GPS1*/GPS2* | Left or right front | 1NO | GPAC10FBA | \$12.00 |
| Alarm Contact (Front Mount) | GPS1*/GPS2* | Right front | 1NC | GPAL01FRA | \$14.00 |
| Alarm Contact (Front Mount) | GPS1*/GPS2* | Right front | 1NO | GPAL10FRA | \$14.00 |
| Front Aux. Position Cover (Package of 10) | GPS1*/GPS2* | Left or right front | N/A | GPAC0VF1A | \$0.50 |




GPAC__FBA
Front Mounted Auxiliary Contacts

Side Mounted Accessories—Auxiliary and Alarm Contacts

Snap on accessories - maximum of [(2) auxiliary contact blocks] or [(1) auxiliary contact block plus (1) alarm/aux. block or (1) short circuit indicator] or [(1) alarm/auxiliary plus (1) short circuit indicator] left and (2) auxiliary contact blocks or (1) shunt trip or (1) under-voltage release right.

| Accessory Type | For Use With | Mounting Position | Contact Configuration | Product Number | List Price GO-10A2C |
|--------------------------------------|--------------|-------------------|-----------------------|------------------------|---------------------|
| Auxiliary Contact (Side Mount) | GPS1*/GPS2* | Left | 2NC | GPAC02LLA ¹ | \$18.00 |
| Auxiliary Contact (Side Mount) | GPS1*/GPS2* | Left | 1NO + 1NC | GPAC11LLA ¹ | \$18.00 |
| Auxiliary Contact (Side Mount) | GPS1*/GPS2* | Left | 2NO | GPAC20LLA ¹ | \$18.00 |
| Auxiliary Contact (Side Mount) | GPS1*/GPS2* | Right | 2NC | GPAC02LRA ¹ | \$18.00 |
| Auxiliary Contact (Side Mount) | GPS1*/GPS2* | Right | 1NO + 1NC | GPAC11LRA ¹ | \$18.00 |
| Auxiliary Contact (Side Mount) | GPS1*/GPS2* | Right | 2NO | GPAC20LRA ¹ | \$18.00 |
| Alarm/Auxiliary Contact (Side Mount) | GPS1*/GPS2* | Left | 1NC Alarm + 1NC Aux. | GPAD0101LLA | \$24.00 |
| Alarm/Auxiliary Contact (Side Mount) | GPS1*/GPS2* | Left | 1NC Alarm + 1NO Aux. | GPAD0110LLA | \$24.00 |
| Alarm/Auxiliary Contact (Side Mount) | GPS1*/GPS2* | Left | 1NO Alarm + 1NC Aux. | GPAD1001LLA | \$24.00 |
| Alarm/Auxiliary Contact (Side Mount) | GPS1*/GPS2* | Left | 1NO Alarm + 1NO Aux. | GPAD1010LLA | \$24.00 |
| Short Circuit Alarm (Side Mount) | GPS1*/GPS2* | Left | 1NO + 1NC | GPAE11LLA ² | \$15.00 |

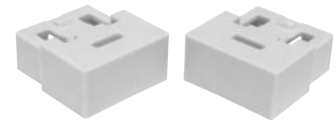

GPAC__FRA
Front Mounted Alarm Contacts

¹GPS1BSAR and GPS1BHAR (24-32 FLA starters) can accept all accessory combinations noted above except that only one lateral auxiliary contact block may be used on this size.

²GPAE11LLA short circuit alarm may not be used with non-metallic enclosures due to reset button interference.



GPAC__LLA/GPAC__LRA
Side Mounted Auxiliary Contacts



GPAD____LLA
Side Mounted Alarm/Auxiliary Contact



GPAE11LLA
Side Mounted Short Circuit Alarm

