



nVent CADDY **Snap Close Conduit Clip**

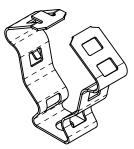

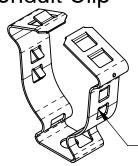

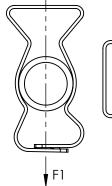

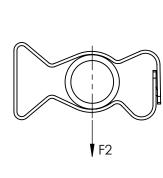

					T .			
Global Part	Local Part Number	Conduit Size	Ø OD (in. [mm])	Mounting Hole	Sizing Chart		Static Load Rating (lb [N])	
Number					Latch "A"	Latch "B"	F1	F2
6M	170790 177130 170100 170110 170120	3/8"	0.55 [14] - 0.71 [18]	9/32" [7]	3/8" EMT, IMC & RIGID	N/A	100 [445]	25 [111]
812M		1/2" to 3/4"	0.71 [18] - 1.18 [30]		3/4" EMT, IMC & RIGID	1/2" EMT, IMC & RIGID		
16M		3/4" to 1"	0.92 [24] - 1.32 [34]		1" EMT, IMC & RIGID	3/4" EMT, IMC & RIGID		
20M		1-1/4"	1.38 [35] - 1.65 [42]		1-1/4" RIGID	1-1/4" EMT & IMC		
24M		1-1/2"	1.65 [42] - 1.97 [50]		1-1/2" RIGID	1-1/2" EMT & IMC		
32M	170130	2"	1.97 [50] - 2.36 [60]		2" RIGID	2" EMT & IMC		
6M4I	N/A	3/8"	0.55 [14] - 0.71 [18]	1/4-20 Thread Impression	3/8" EMT, IMC & RIGID	N/A		
812M4I		1/2" to 3/4"	0.71 [18] - 1.18 [30]		3/4" EMT, IMC & RIGID	1/2" EMT, IMC & RIGID		
16M4I		3/4" to 1"	0.92 [24] - 1.32 [34]		1" EMT, IMC & RIGID	3/4" EMT, IMC & RIGID		
20M4I		1-1/4"	1.38 [35] - 1.65 [42]		1-1/4" RIGID	1-1/4" EMT & IMC		
24M4I		1-1/2"	1.65 [42] - 1.97 [50]		1-1/2" RIGID	1-1/2" EMT & IMC		
32M4I		2"	1.97 [50] - 2.36 [60]		2" RIGID	2" EMT & IMC		


Bottom Gripping Tabs


Conduit Clip Installation

- Select appropriate Latching Hole from Sizing Chart.
- 2. Fit Conduit into Conduit Clip

For the 16M, compress the Bottom Gripping Tabs prior to installing the 3/4" RIGID and 1" RIGID Conduit.

By Hand or with Channel Lock Pliers, snap the Locking Tab into the desired Latching Hole. 3.

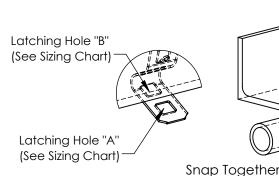

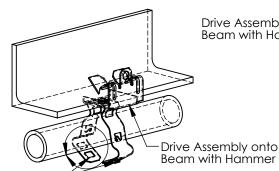

Drive Assembly onto Beam with Hammer



WARNING:

- Bottom Mount Installation

- Nent products shall be installed and used only as indicated in nVent product instruction sheets and training materials. Instruction sheets are available at www.nVent.com and from your nVent customer service representative.

 nVent products must never be used for a purpose other than the purpose for which they were designed or in a manner that exceeds specified load ratings.

 All instructions must be completely followed to ensure proper and safe installation and performance.

 Improper installation, misuse, misapplication or other failure to completely follow nVent's instructions and warnings may cause product malfunction, properly damage, serious bodily injury and/or death, and void your warranty.

 Products that are manufactured using spring steel components shall be used only in a non-corrosive indoor environment.

 All pipe supports, hangers, intermediate components and structural attachments must ONLY be used as described herein and are NEVER to be used for any other purpose.

NOTE: All load ratings are for static conditions and do not account for dynamic loading such as wind, water or seismic loads, unless otherwise noted.

nVent, CADDY, ERICO CADWELD, ERICO CRITEC, ERICO, ERIFLEX, and LENTON are owned by nVent or its global affiliates. All

The customer is responsible for:

- a. Conformance to all governing codes.
 b. The integrity of structures to which the products are attached, including their capability of safely accepting the loads imposed, as evaluated by a qualified
- engineer.

 c. Using appropriate industry standard hardware as noted above.

All governing codes and regulations and those required by the job site must be observed.

Always use appropriate safety equipment such as eye protection, hard hat, and gloves as appropriate to the application.



