



# CADDY ROD LOCK Strut Nut

## 3/8", M8, M10


Part Number	Article Number	Rod Size	Strut Channel Profile	Strut Channel Thickness	Required strut slot width*	Load Rating
CRLSL37EG	N/A	3/8"	A - Type	12 Ga	9/16"	1,500 lbs
			C - Type	14 Ga	9/16"	900 lbs
CRLSLM8EG	390041	M8	A - Type	1.5 mm	14 mm	3,400 N
				2.0 mm	14 mm	4,000 N
				2.5 mm	14 mm	4,900 N
			C - Type	1.5 mm	14 mm	3,400 N
				2.0 mm	14 mm	4,000 N
				2.5 mm	14 mm	4,900 N
CRLSLM10EG	390042	M10	A - Type	1.5 mm	14 mm	3,400 N
				2.0 mm	14 mm	4,000 N
				2.5 mm	14 mm	6,200 N
			C - Type	1.5 mm	14 mm	3,400 N
				2.0 mm	14 mm	4,000 N
				2.5 mm	14 mm	6,200 N

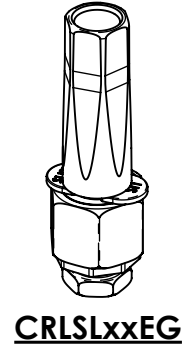

\* Pentair offers CADDY ERISTRUT having 14mm slot width.

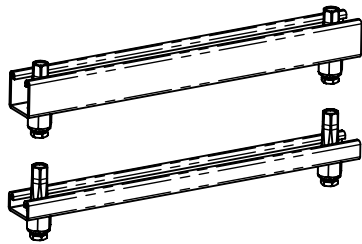


### Strut Edge Distance Requirement

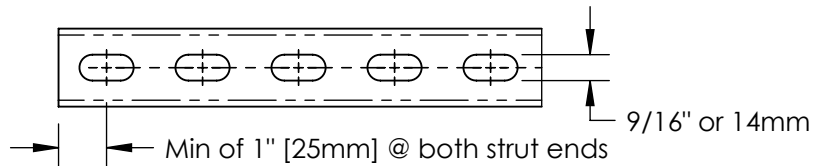


### Configuration #1

Rotation Only

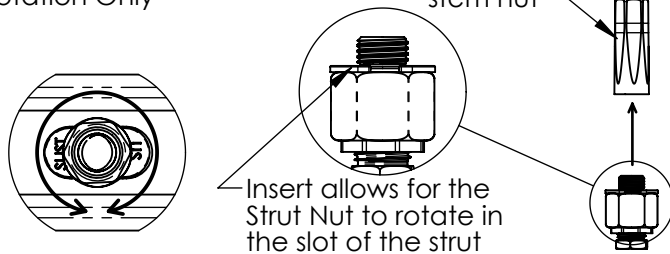

### Configuration #2

Sliding and Rotation

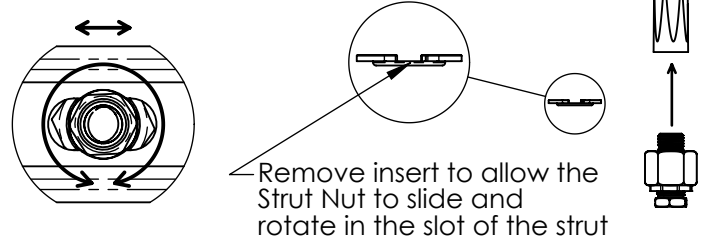

**WARNING:**

- Pentair products shall be installed and used only as indicated in Pentair product instruction sheets and training materials. Instruction sheets are available at [www.erico.pentair.com](http://www.erico.pentair.com) and from your Pentair customer service representative.
- PENTAIR products must never be used for a purpose other than the purpose for which they were designed or in a manner that exceeds specified load ratings.
- All instructions must be completely followed to ensure proper and safe installation and performance.
- Improper installation, misuse, misapplication or other failure to completely follow Pentair's instructions and warnings may cause product malfunction, property damage, serious bodily injury and/or death, and void your warranty.
- Products that are manufactured using spring steel components shall be used only in a non-corrosive indoor environment.
- All pipe supports, hangers, intermediate components and structural attachments must ONLY be used as described herein and are NEVER to be used for any other purpose.

NOTE: All load ratings are for static conditions and do not account for dynamic loading such as wind, water or seismic loads, unless otherwise noted.

The customer is responsible for:

- Conformance to all governing codes.
- The integrity of structures to which the products are attached, including their capability of safely accepting the loads imposed, as evaluated by a qualified engineer.
- Using appropriate industry standard hardware as noted above.

**SAFETY INSTRUCTIONS:**

All governing codes and regulations and those required by the job site must be observed. Always use appropriate safety equipment such as eye protection, hard hat, and gloves as appropriate to the application.

Pentair, CADDY, ERICO CADWELD, ERICO CRITEC, ERICO, ERIFLEX, and LENTON are owned by Pentair or its global affiliates. All other trademarks are the property of their respective owners. Pentair reserves the right to change specifications without prior notice.




# CADDY ROD LOCK Strut Nut

## 3/8", M8, M10


**Step 1** Install CADDY ROD LOCK Strut Nut on to strut

Step 1-1:  
Rotate lock nut counter clockwise until reaches the fully extended position on both sides to enable/free CADDY ROD LOCK Mechanism

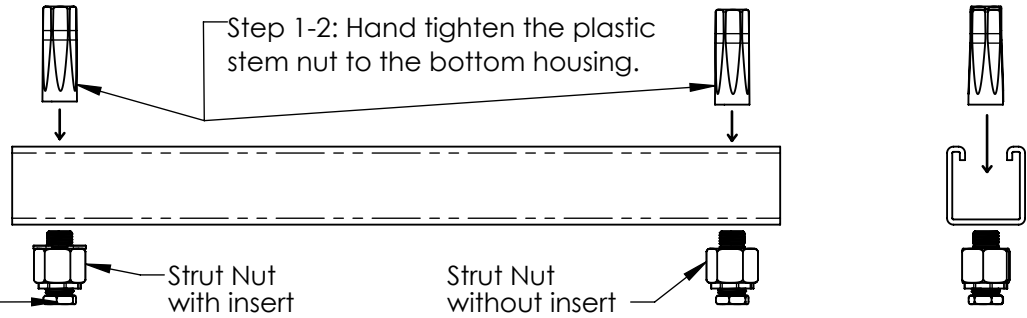


**Step 2**

Tighten plastic stem nut to fully closed position and then loosen slightly using tools to allow for free rotation

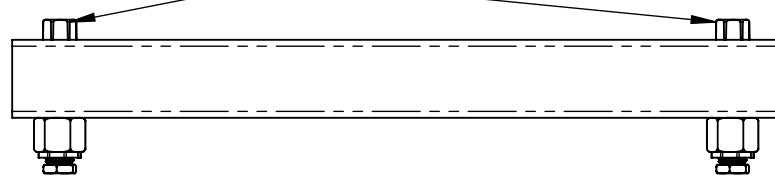


Note: Once Step 2 has been completed, the top and bottom parts are tightly held together, which enables the assembly to spin/slide in the slot without disassembling during transportation. This will preserve the ability of fine height adjustment in the field.

**Step 3**

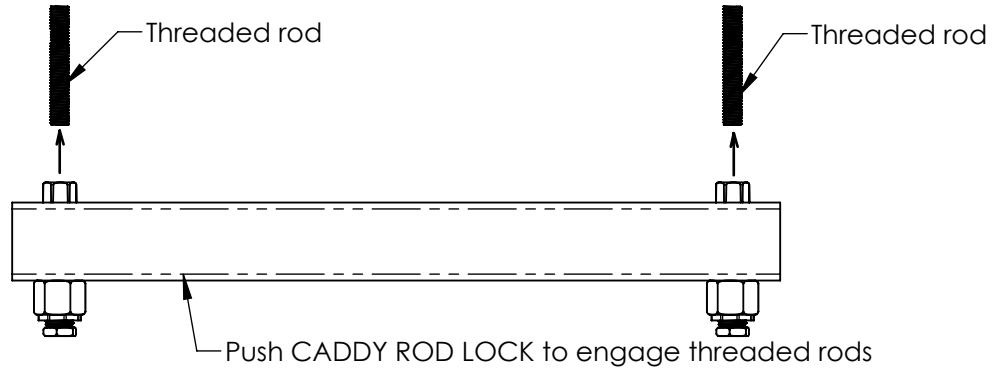

**Step 4**

Step 4-3 (Optional): Tighten the top stem nut an additional 1/2 turn clockwise with 5/8" [16mm] wrench. Hold the bottom housing with 15/16" [24mm] wrench during tightening.

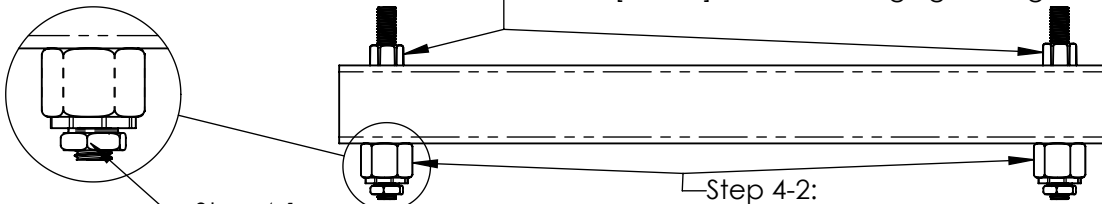

Step 4-1:  
Tighten lock nut on both sides

Step 4-2:  
Rotate the hex housing to finely tune the strut height  
Clockwise = Adjust assembly down  
Counter-clockwise = Adjust assembly up



Pentair, CADDY, ERICO CADWELD, ERICO CRITEC, ERICO, ERIFLEX, and LENTON are owned by Pentair or its global affiliates. All other trademarks are the property of their respective owners. Pentair reserves the right to change specifications without prior notice.

